

Smoke and heat vent control unit

10A – 4 – 1

- 10A** max. rated motor current at 24V DC
4 Ventilation groups
1 Smoke and heat vent group



Technical Documentation

BSC Technology GmbH
Dr.-Köhl-Straße 6
D-95119 Naila

Telephone (main number)
+49 9282 48731-0

windowdrives.com

Fax (main number)
+49 9282/48731-29

mail: info@bsc-technology.de



WINDOWDRIVES
BSC TECHNOLOGY

1 Contents

	Page
1 Contents	2
1.1 List of figures.....	2
2 Equipment diagram.....	3
3 Installation	4
3.1 General	4
3.2 Regulations and installation instructions.....	4
3.3 Accident prevention regulations.....	4
3.4 Layout of the control unit.....	4
3.5 Connecting the Smoke and Heat Vent Control Unit 10A-4-1	5
3.6 Overview circuit diagram.....	6
3.7 Connecting the motor openers	7
3.7.1 Determining the cable cross-sections	8
3.7.2 Cable types.....	9
3.8 Connecting the smoke and heat vent switches	10
3.9 Connecting the ventilation pushbuttons and wind/rain detector system.....	12
3.10 Relaying of trigger and fault states.....	13
3.11 Connecting the batteries	13
3.12 Parameter setting of the ventilation groups.....	14
4 Functional description.....	15
4.1 Smoke and heat vent (triggered) operation	15
4.2 Ventilation mode	15
4.3 Comfort ventilation module	16
4.3.1 Stroke limitation	16
4.3.2 Automatic Close.....	16
4.4 Open display	16
4.5 Site of installation of the comfort ventilation module	17
5 Commissioning	18
6 Operator action	20
6.1 Display and operator control elements on the board.....	20
6.2 Audible signals.....	22
6.3 Fuses on the board	23
6.4 State at time of delivery	23
7 Programming (SETUP).....	24
8 Locating faults / troubleshooting	26
9 Maintenance	27
10 Technical data	28
11 Annex with circuit diagrams	

1.1 List of figures

Fig. 1: View of smoke and heat vent control unit 10A-4-1	3
Fig. 2: Terminal connection plan	5
Fig. 3: Overview circuit diagram of smoke and heat vent control unit 10A-4-1.....	6
Fig. 4: Connection of motor opener 24V DC	7
Fig. 5: Connecting the smoke and heat vent switches.....	10
Fig. 6: Smoke and heat vent switches 6 and 7	11
Fig. 7: Connection of wind/rain detectors and ventilation pushbuttons.....	12
Fig. 8: Fault and trigger relays.....	13
Fig. 9: Battery connection.....	13
Fig. 10: Displays and controls	20

3 Installation

3.1 General

Installation, commissioning, repair and maintenance of the Smoke and Heat Vent Control Unit should only be carried out by trained specialists

3.2 Regulations and installation instructions

The following regulations and instructions must be observed during installation, cabling and commissioning work:

- national building regulations
- DIN 18232 – Structural fire safety in industrial buildings
- VDS Directive 2098
- regulations of the competent fire safety authorities
- guideline ZH 1/494 for power-operated windows, doors and gates
- VDE 0100, VDE 0108
- the rules of the competent power supply company
- the control unit should be installed in a location that allows unobstructed access to the control unit for subsequent maintenance and repair work
- the housing must be fastened to the wall
- for the 230V AC supply shall be provided to external isolation facility

Important note:

The batteries must be charged for at least 12 hours before commissioning can begin. When connecting the batteries, it is of the utmost importance to ensure the correct polarity.

3.3 Accident prevention regulations

The general accident prevention regulations, the accident prevention regulations for power-operated windows, doors and gates, and the VDE installation regulations must be obeyed at all times.

Important warning

The system must be isolated from voltage before any components are removed.

- **first disconnect the 230 V mains voltage**
- **then disconnect the batteries**
- **To protect the electronic components, before carrying out work on the board the installation technician must earth him or herself → by touching the earthing connector**
- **when switching on the system again, the voltages are reconnected in reverse sequence**

3.4 Layout of the control unit

The Smoke and Heat Vent Control Unit 10A-4-1 has **4** motor lines, **1** manual detector line, **1** automatic detector line and one input for the BMZ (Brand- Melde- Zentrale - fire alarm unit) which make it possible to connect the following components:

- **Motors:** Twelve model JM – DC - ... 24 V / 0.8 A motors with associated external load disconnecter can be connected. If other motors are connected, the number of motors in each motor line is limited by the current consumption. The max. breaking capacity of each motor line is 5A; the maximum current of 10A for the control unit must not be exceeded.
- **Detectors:** Up to 10 smoke and heat vent switches can be connected to the manual detector line. Up to 10 or 11 to 25 (setting in SETUP mode) automatic detectors [optical smoke detectors, maximum heat detectors or differential heat detectors] can likewise be connected.

3.5 Connecting the Smoke and Heat Vent Control Unit 10A-4-1

The Smoke and Heat Vent Control Unit 10A-4-1 is equipped with terminal blocks on the board where all the necessary connections can be made, both incoming and outgoing. The cables are routed from the rear through the aperture for that purpose at the bottom of the box. The cables can be routed from above or below behind the bottom of the box.

The following illustration shows the positions of the individual terminals on the board:

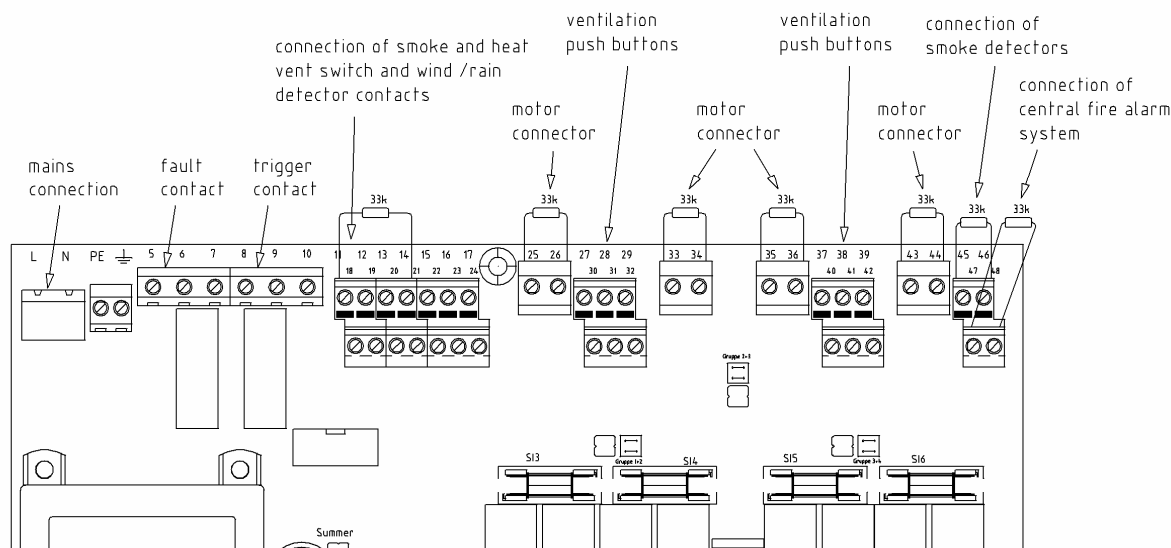


Fig. 2: Terminal connection plan

All of the terminals are arranged on the lower part of the board, and are easily accessible using a suitable screwdriver. Located on the right side is the clearly structured operator control and display panel of the Smoke and Heat Vent Control Unit. The fuses SI3 - SI6 for the motor line are located above the all-or-nothing relay. Fuse SI2 is for the mains power supply located underneath the transformer.

3.6 Overview circuit diagram

The following illustration depicts the entire smoke and heat vent system with the associated external components. Although depending on the specific application not all external components may be required, they will be shown here in the interests of completeness.

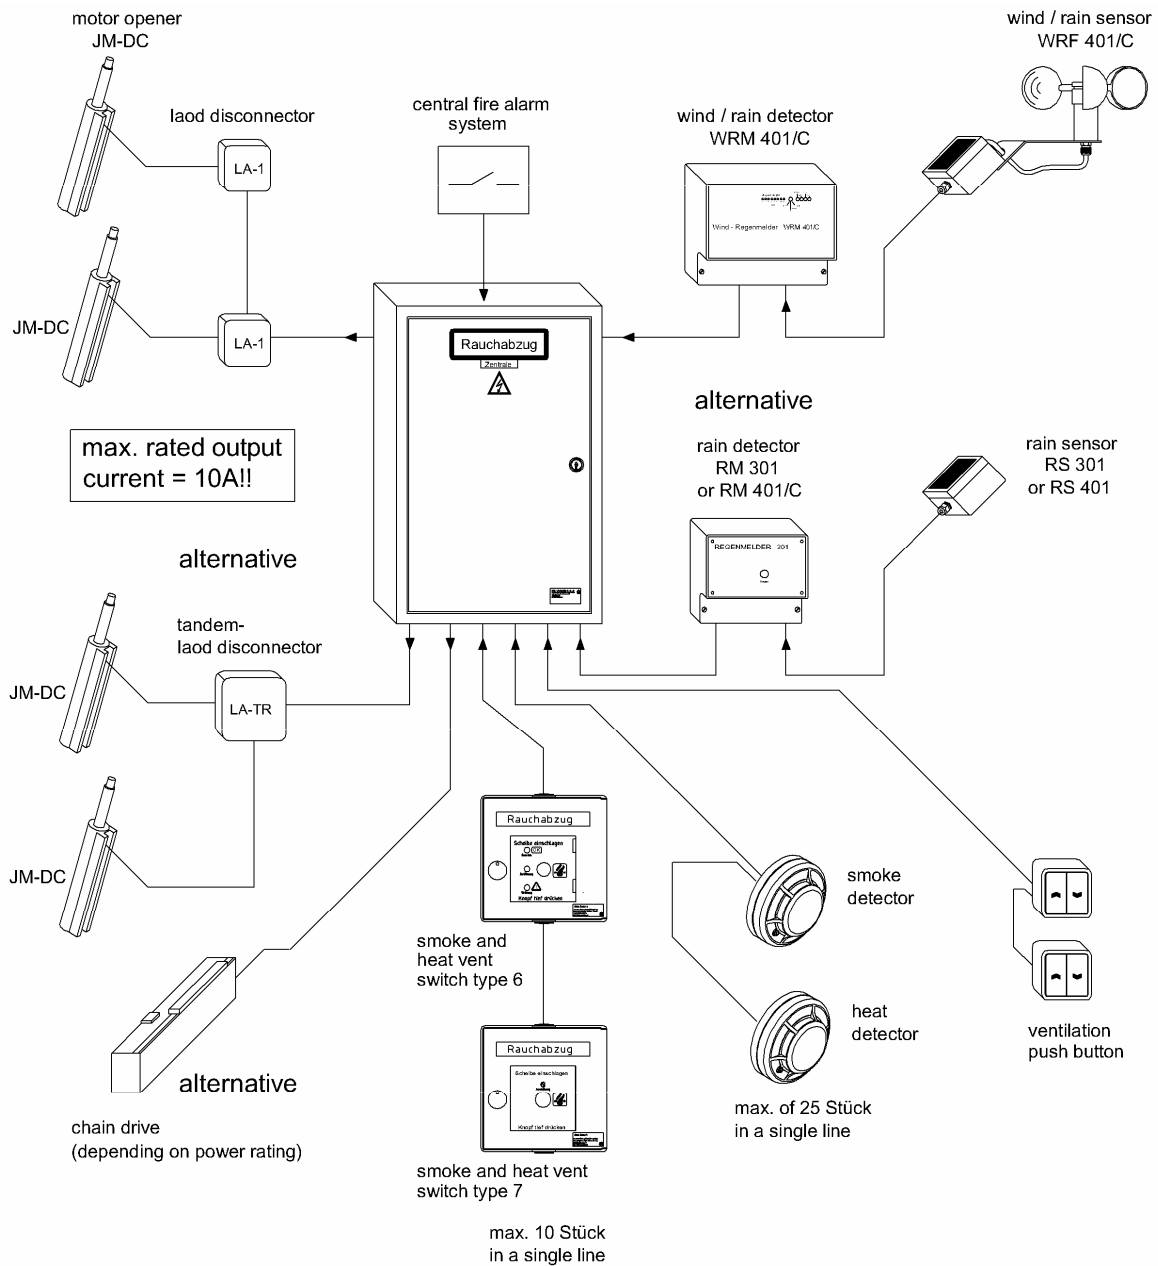


Fig.3: Overview circuit diagram of smoke and heat vent control unit 10A-4-1

The following sections will describe how and where the individual external components are connected to the Smoke and Heat Vent Control Unit.

!!!! **Connection of all devices, such as detectors, motors etc. is shown in detail in the circuit diagrams in the Appendix.**

3.7 Connecting the motor openers

The Smoke and Heat Vent Control Unit 10A-4-1 has 4 motor lines with a maximum breaking capacity of 10 A. Each line must not have more than 5A.

These motors must always remain connected to a load disconnecter (LA-1 → stand-alone operation, LA-TR → tandem operation, LA-GL2 or LA-GL/A parallel operation).

The following illustration shows an example of motor connections in stand-alone and tandem operation on the motor line:

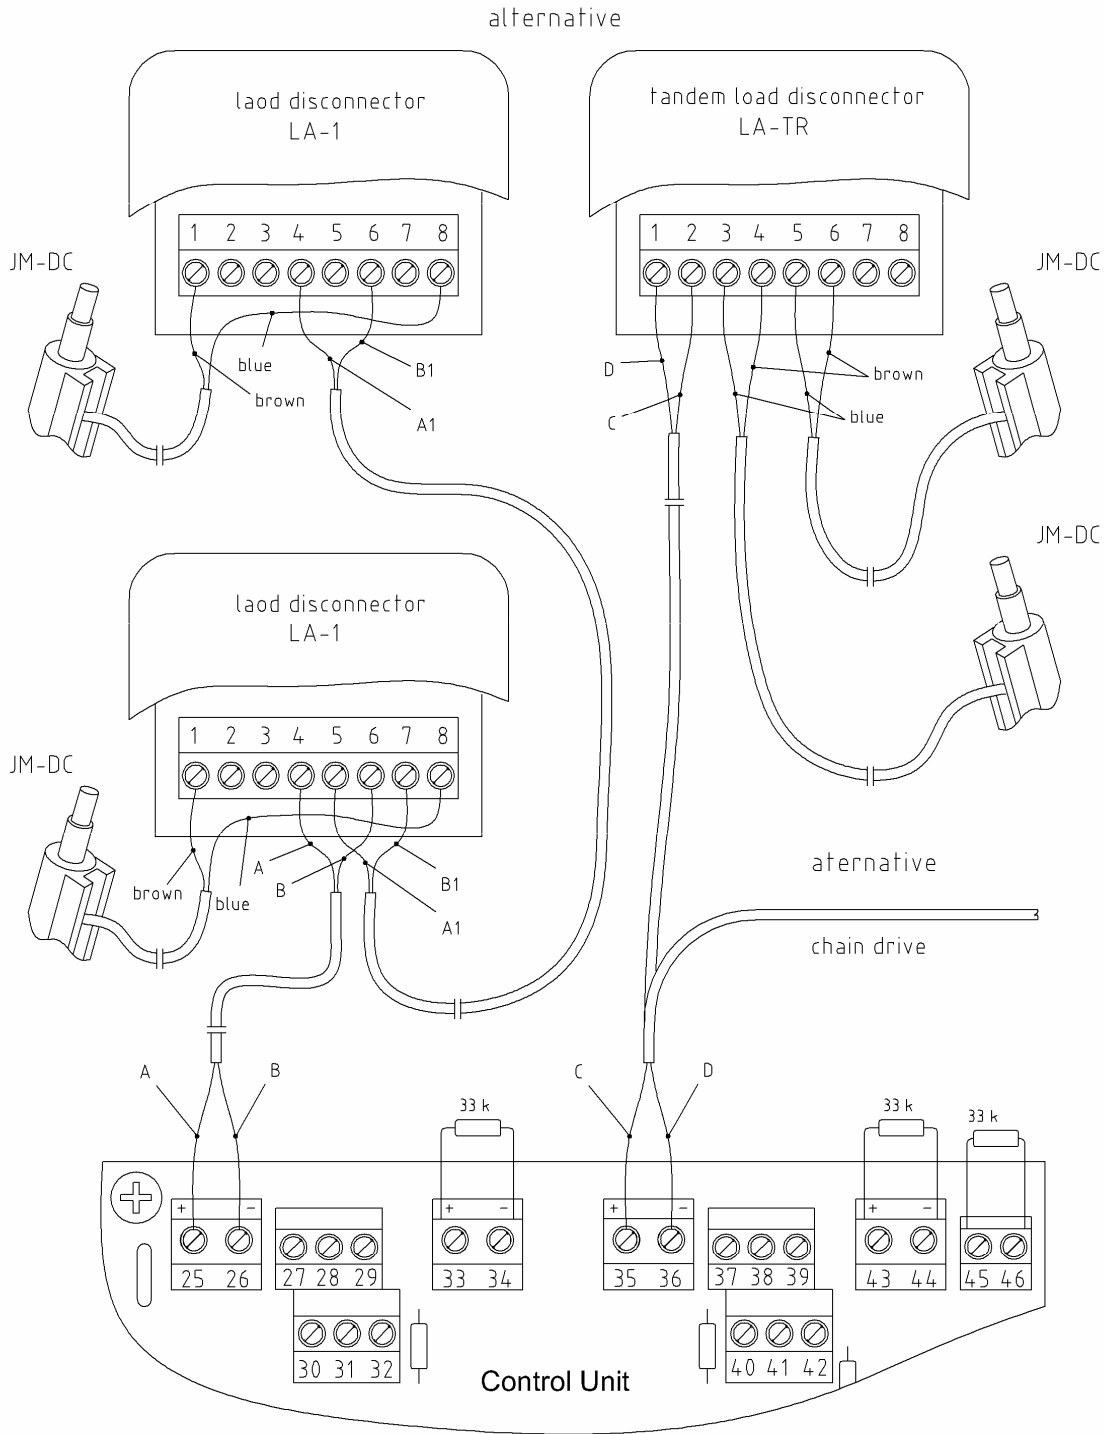


Fig.4: Connection of motor opener 24V DC

When connecting chain drives and third-party drives, the separate circuit diagrams in the Appendix must be observed.

If no model JM – DC - ... motor opener with its associated load disconnecter is connected to a line, **then the line must be terminated by means of a 33 KΩ resistor.** This resistor is used in monitoring the motor line for line breaks. A 33 KΩ terminal resistor is likewise required when connecting third-party drives with switch-off by means of limit switches in the end positions. This is installed on the motor via the + and – terminals.

3.7.1 Determining the cable cross-sections

When 24 V DC motor openers are used, the length of the motor supply cables is limited due to voltage drop. In such cases, the maximum permissible cable length is determined by the number of motors operated on a motor line and by the cable cross-section.

The following table shows the maximum permissible cable length depending on the **rated current of the connected motor openers** and the cable cross-section :

Current consumption(I) each motor line in [A]	Number of wires required (without earthing conductor)	Maximum permissible simple cable length to the last motor [m]
up to 0.5A	2 x 1.5mm ²	168m
up to 0.5A	2 x 2.5mm ²	280m
up to 0.5A	2 x 4mm ²	449m
up to 0.5A	2 x 6mm ²	674m
0.5A to 1A	2 x 1.5mm ²	84m
0.5A to 1A	2 x 2.5mm ²	140m
0.5A to 1A	2 x 4mm ²	224m
0.5A to 1A	2 x 6mm ²	337m
1A to 1.5A	2 x 1.5mm ²	56m
1A to 1.5A	2 x 2.5mm ²	93m
1A to 1.5A	2 x 4mm ²	149m
1A to 1.5A	2 x 6mm ²	224m
1.5A to 2A	2 x 1.5mm ²	42m
1.5A to 2A	2 x 2.5mm ²	70m
1.5A to 2A	2 x 4mm ²	112m
1.5A to 2A	2 x 6mm ²	168m
2A to 2.5A	2 x 1.5mm ²	33m
2A to 2.5A	2 x 2.5mm ²	56m
2A to 2.5A	2 x 4mm ²	89m
2A to 2.5A	2 x 6mm ²	134m
2.5A to 3A	2 x 1.5mm ²	28m
2.5A to 3A	2 x 2.5mm ²	46m
2.5A to 3A	2 x 4mm ²	74m
2.5A to 3A	2 x 6mm ²	112m
3A to 3.5A	2 x 1.5mm ²	24m
3A to 3.5A	2 x 2.5mm ²	40m
3A to 3.5A	2 x 4mm ²	64m
3A to 3.5A	2 x 6mm ²	96m
3.5A to 4A	2 x 1.5mm ²	21m
3.5A to 4A	2 x 2.5mm ²	35m
3.5A to 4A	2 x 4mm ²	56m
3.5A to 4A	2 x 6mm ²	84m
4A to 4.5A	2 x 1.5mm ²	18m
4A to 4.5A	2 x 2.5mm ²	31m
4A to 4.5A	2 x 4mm ²	50m
4A to 4.5A	2 x 6mm ²	75m

Current consumption(I) each motor line in [A]	Number of wires required (without earthing conductor)	Maximum permissible simple cable length to the last motor [m]
4.5A to 5A	2 x 1.5mm ²	16m
4.5A to 5A	2 x 2.5mm ²	28m
4.5A to 5A	2 x 4mm ²	44m
4.5A to 5A	2 x 6mm ²	67m
4.5A to 5A	2 x 10mm ²	112m

The following table shows the maximum permissible cable length depending on the number of **24V DC pulsed-current remote triggers** and the cable cross-section:

Number of remote triggers	Number of wires required (without earthing conductor)	Maximum permissible simple cable length to the last motor [m]
1	2 * 1.5 mm ²	420m
1	2 * 2.5 mm ²	700m
2	2 * 1.5 mm ²	210m
2	2 * 2.5 mm ²	350m
3	2 * 1.5 mm ²	140m
3	2 * 2.5 mm ²	233m
4	2 * 1.5 mm ²	105m
4	2 * 2.5 mm ²	175m
5	2 * 1.5 mm ²	84m
5	2 * 2.5 mm ²	140m
6	2 * 1.5 mm ²	70m
6	2 * 2.5 mm ²	116m
7	2 * 1.5 mm ²	60m
7	2 * 2.5 mm ²	100m
8	2 * 1.5 mm ²	52m
8	2 * 2.5 mm ²	87m

3.7.2 Cable types

All cable types must always be approved by the responsible building authorities, fire safety authorities, or the local fire brigade.

3.8 Connecting the smoke and heat vent switches

The following illustration shows the connection of the smoke and heat vent switches and automatic detectors to the Smoke and Heat Vent Control Unit 10A-4-1.

max. of 10 in a single line

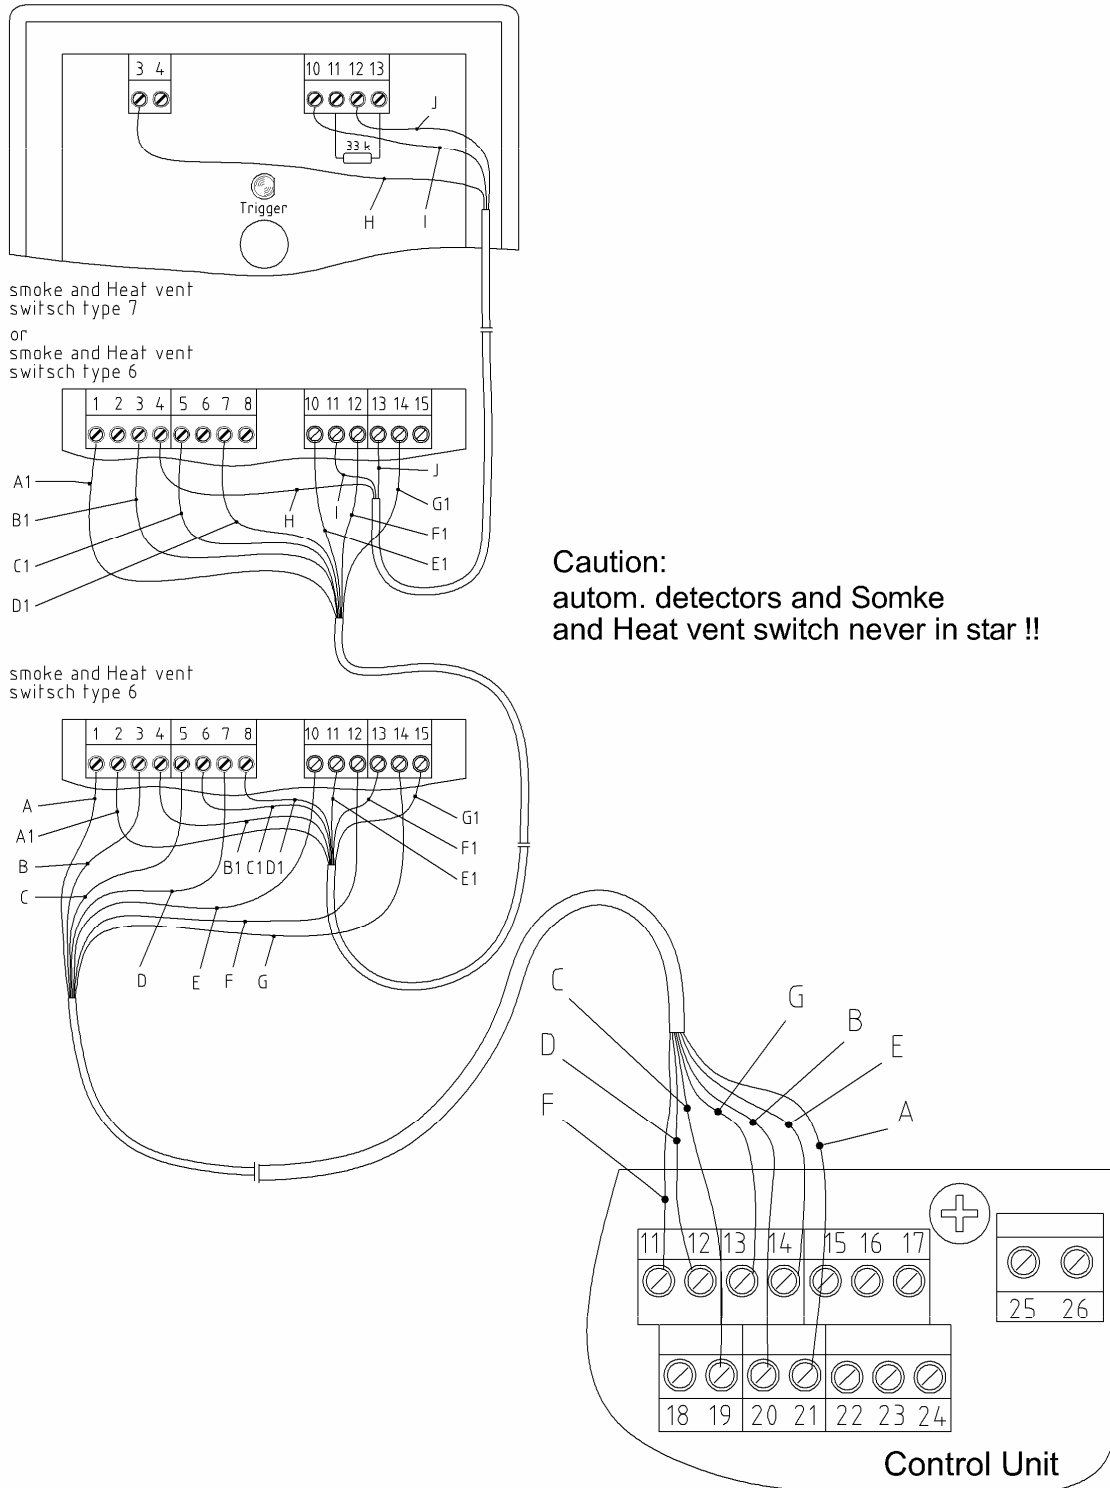


Fig.5: Connecting the smoke and heat vent switches

Depending on the switch type, the manual detectors (unit switch 6 and / or unit switch 7) use 7- or 3-strand cables. **As in the motor line, a 33 K Ω resistor must be connected in the last detector for the purposes of cable monitoring.**

The smoke and heat vent switches are divided into two types according to their various displays and functions:


Smoke and heat vent switch 6: (main control position acc. to EN 12101-9 and VdS 2592)

- “Trigger smoke and heat vent” pushbutton
- “Reset” pushbutton
- „Close“ pushbutton
- “Trigger” LED
- „Fault“ LED
- „Mode“ LED


Smoke and heat vent switch 7: (secondary control position acc. to EN 12101-9 and VdS 2592)

- “Trigger smoke and heat vent” pushbutton
- “Trigger” LED

The following illustrations show the two smoke and heat vent switches:

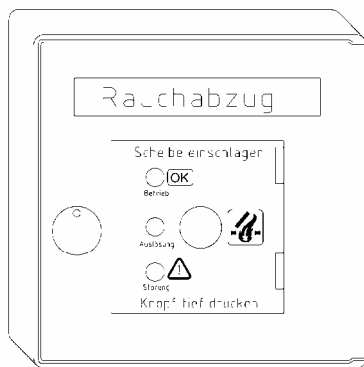

Smoke and heat vent switch 6

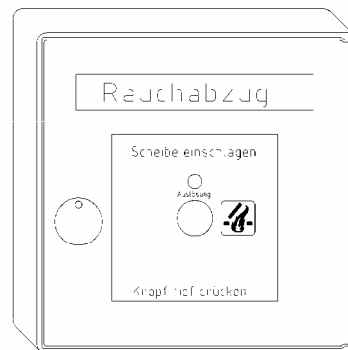

Smoke and heat vent switch 7

Fig. 6: Smoke and heat vent switches 6 and 7

When connecting more than one smoke and heat vent switch, it must be ensured that the cables are routed from one smoke and heat vent switch to the next. Only in this way will it be possible to monitor the line properly with the aid of the 33 K Ω resistor.

3.9 Connecting the ventilation pushbuttons and wind/rain detector system

The following illustration shows the connection of the ventilation pushbuttons (double rocker switch without mutual interlock) and the connection of wind/rain detectors to the Smoke and Heat Vent Control Unit.

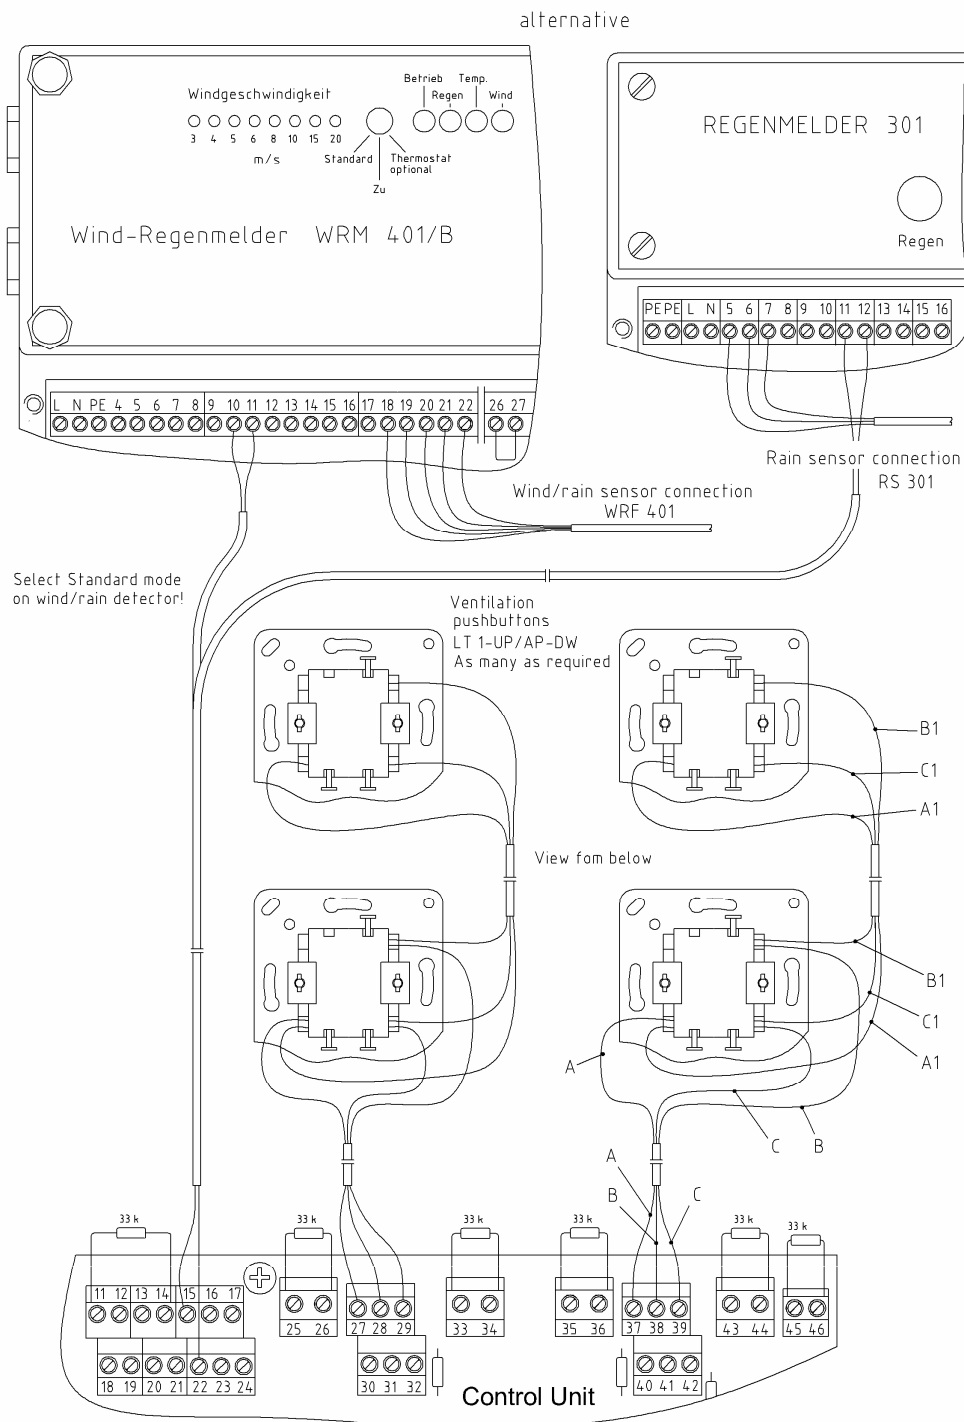


Fig. 7: Connection of wind/rain detectors and ventilation pushbuttons


As many ventilation pushbuttons as desired can be connected to each motor line. The ventilation pushbuttons make use of three-strand cables.

A wind/rain detector system can be connected to the Smoke and Heat Vent Control Unit 10A-4-1 for priority closing of the opening devices in ventilation mode. The illustration above shows the connection of the (W)RM 401/C wind/rain detector system and connection of the RM 301 rain detector. It is also possible to connect a third-party product, provided that it is equipped with a floating make contact.

For the proper operation and the wind/rain detector, also observe the technical documents of the wind/rain detector.

3.10 Relaying of trigger and fault states

Two relays, each with a floating changeover contact, are provided to pass on the trigger and fault state (see illustration).

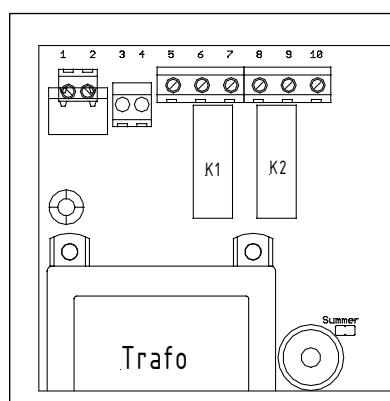

The fault relay (terminals 5, 6, 7) is used for the relay of faults.

The trigger relay (terminals 8, 9, 10) is used for the relay of trigger signals.

Both relays (floating changeover contacts) can switch over at 60 V 3 A.


In the normal state, the fault relay is picked up; it drops out in the event of a fault.

<u>Contact closed:</u>	Terminals 5 + 7:	Fault
	Terminals 6 + 7:	No fault
	Terminals 8 + 10:	No trigger
	Terminals 9 + 10:	Trigger

Fig. 8: Fault and trigger relays

3.11 Connecting the batteries

When connecting the batteries, it is of the utmost importance to ensure the correct polarity. **A wrong connection will always result in immediate destruction of the board.** The red wire always indicates the positive terminal, and the blue wire always indicates the negative terminal of the battery. Terminals 49 and 50 on the board are available for connecting the battery.

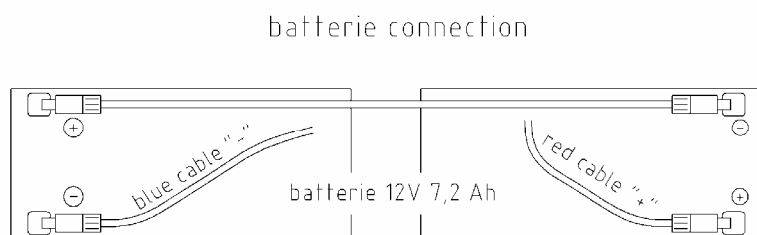

Connection of batteries:
 In series 2 x 12V / 7.2Ah

Fig. 9: Battery connection

The emergency power supply comprises two 12V / > 7.2Ah batteries, which are connected in series to provide a combined 24 V DC. This is done by connecting the + terminal of one battery to the - terminal of the other battery. The two remaining terminals are then connected with the leads on the board.

(Red → Positive / Blue → Negative)

3.12 Parameter setting of the ventilation groups


The Smoke and Heat Vent Control Unit 10A-4-1 has totally 4 ventilation groups (4 motor lines) which can optionally be connected with each other by jumpers. For this purpose, small jumpers are provided underneath the motor outgoing terminals (plug-in jumpers).

There is a total of 3 jumper pairs for the connection of ventilation groups (see figure below).

- If the left jumper pair is placed horizontally, motor outputs 1 and 2 are connected to a single ventilation group.
- If the jumper pair in the middle is placed horizontally, motor outputs 2 and 3 are connected to a single ventilation group.
- If the right jumper pair is placed horizontally, motor outputs 3 and 4 are connected to a single ventilation group.
- If all jumper pairs are placed horizontally, all motor outputs have been connected into a single motor group.

If several ventilation groups are connected together, the ventilation pushbuttons are connected to the terminals of one of the combined ventilation groups.

The parameters of the optional plug-in comfort ventilation module is not effected by this. These parameters must always be set in Steup mode and enabled, resp.

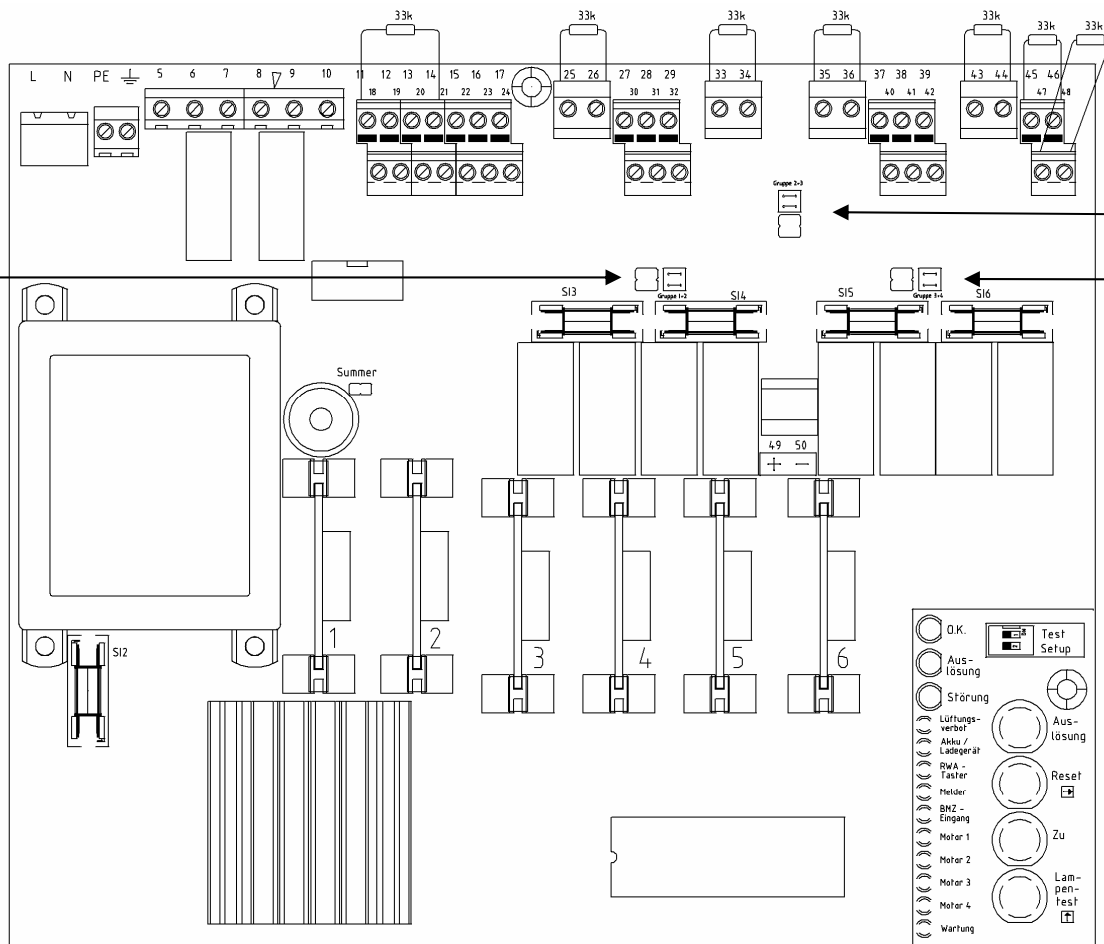

4 Functional description

The Smoke and Heat Vent Control Unit 10A-4-1 is a smoke and heat vent control unit with an emergency power supply for 72 hours in the event of a power outage. It is used to open and close electric motor-driven smoke vents in the event of a fire, and also for everyday ventilation.

The functional description will be kept quite general at this point. The functions of the individual operator control and display elements will be described in more detail in the next section.

A distinction is made between two basic operating modes:

4.1 Smoke and heat vent (triggered) operation

In the event of a fire (triggered by smoke and heat vent pushbutton, smoke detector or heat detector or the fire alarm system), the connected opening elements open. Smoke and heat vent operation always has priority over ventilation mode; the batteries help to ensure that after 72 hours of power outage the system can still be opened twice and closed once (smoke and heat vent operation). It can be triggered manually by pressing the "Trigger" pushbutton on the external smoke and heat vent switches, or automatically when one of the automatic detectors or the fire alarm system is triggered. Triggering is also possible when a power outage has lasted longer than 72 hours.

When necessary, or when the fire brigade so desires, the connected opening elements can be given a Reset command and then closed again. To do this, first the smoke and heat vent alarm is acknowledged by pressing the "Reset pushbutton" on the smoke and heat vent switch or on the board. Then the opening elements can be closed again by pressing the "Close pushbutton" on smoke and heat vent switch 6, the individual ventilation pushbuttons, or the "Close pushbutton" on the board.

Smoke and heat vent operation has priority over ventilation mode, i.e. operation in ventilation mode is not possible during a smoke and heat vent operation alarm.

4.2 Ventilation mode

Three different ventilation modes (Continuous / Open only / Open and Close) can be set on the board. The settings are made in Set-up mode (see [Programming](#)).

The connected opening elements can be opened and closed by means of the individual ventilation pushbuttons.

In „Continuous“ mode, pressing the Open pushbutton at the ventilation pushbutton once moves the motor to the Open end position, and pressing the Close pushbutton once moves it to the Closed end position. Both pushbuttons can be pressed simultaneously to hold the motor in an intermediate position.

In „Push“ position, the motor can be moved in the Open direction only so long as the Open pushbutton on the ventilation pushbutton is held pressed. If the Close pushbutton on the ventilation pushbutton is pressed, the motor moves to its Closed end position („Push Open only“ mode). In „Push Open and Close“ mode, the drive also moves in Close direction.


If a wind/rain detector is connected, its function has priority over normal ventilation mode, i.e. in the event of a rain/wind alarm the connected opening elements are closed automatically, and can only be opened again manually after the rain/wind alarm has dropped out.

Operation in ventilation mode is not possible during a power outage.

“No ventilation” is also issued when a battery undervoltage is detected (*the battery cannot allow additional ventilation because otherwise operation for 72 hours under emergency power would no longer be possible*). This is signalled by means of a red LED on the board+.

4.3 Comfort ventilation module

If the optional comfort ventilation module is installed, the following additional ventilation functions can be used.

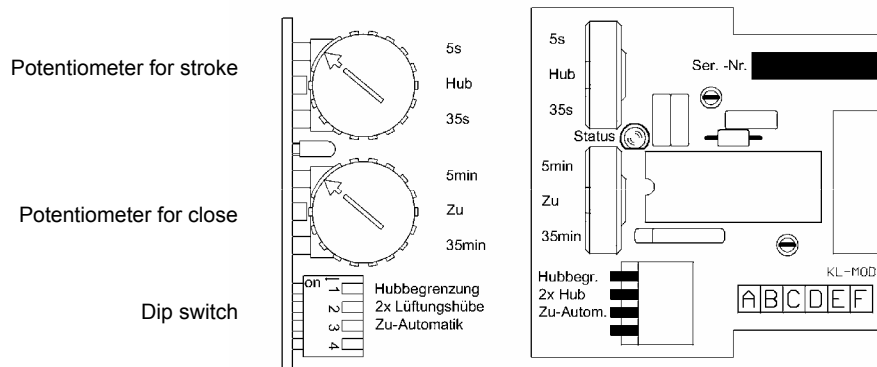

4.3.1 Stroke limitation

To enable the stroke limitation function, move the „Stroke limit.“ dip switch to „ON“ position (left). The „Continuous“ ventilation mode should be set.

An opening between 5s and 35s can be set at the „Stroke“ potentiometer. If the ventilation pushbutton moves to Open, the motor is actuated only the time set in the previous step.

Dip switch „2x stroke“ actuates the set opening time twice. The maximum opening time is double the time set. However, the ventilation pushbutton should be pressed at least twice.

The connected drive can perform an Open movement only for the time set even if the motor has meanwhile (while the set time is running) been instructed to Close.

Example:

- Time set = 20 seconds
- The pushbutton moves the motor Open
- After 10 seconds it moves Close for 5 seconds
- After that, it moves Open again with the ventilation pushbutton
- → the motor will open only for another 15 seconds !!!!!

4.3.2 Automatic Close

To enable the automatic Close, the „Autom. Close“ dip switch should be set to „ON“ position (left). An automatic time between 5s and 35s can be set at the „Close“ potentiometer. The time starts after the last move instruction (Open or Close). The time is reset automatically after at least 8 minutes of Close and the Open display has extinguished.

4.4 Open display

The smoke and heat vent control unit has an output (24V DC, 50 mA) for the Open display.

If the connected drive moves Open, this output is switched. If after a Close instruction the connected drive is at least 8 minutes in Close state, the display extinguishes (the output is reset).

The Open display works without feedback from the drive by assuming that the drive is closed if it moves close for at least 8 minutes. The Open display is switched off in this case.

Each time the Open drive is actuated, the Open display is switched on again.

4.5 Site of installation of the comfort ventilation module

The modules must only be installed or removed when the smoke and heat vent control unit is isolated electrically (battery and mains supply disconnected). Depending on the function, the slot for the comfort ventilation module can be seen from the table below. Totally four modules can be used. Adjacent groups can be connected together in Setup mode. The table below will indicated the slot for your application.

Functional area	Slot 1	Slot 2	Slot 3	Slot 4	Slot 5	Slot 6
Group 1	Yes	-	-	-	-	-
Groups 1+2	Yes	-	-	-	-	-
Groups 1+2+3	Yes	-	-	-	-	-
Groups 1+2+3+4	Yes	-	-	-	-	-
Group 2	-	Yes	-	-	-	-
Groups 2+3	-	Yes	-	-	-	-
Groups 2+3+4	-	Yes	-	-	-	-
Group 3	-	-	Yes	-	-	-
Groups 3+4	-	-	Yes	-	-	-
Group 4	-	-	-	Yes	-	-

The functional range of the comfort ventilation module must be set up as described in the Setup menu of the control unit (see description on page 23).

In the KL-MOD assignment „all individually“, the module slots 1..4 are firmly assigned to the appropriate ventilation groups 1..4.

This means that, e.g., one KL-MOD for ventilation group 2 must be installed in module slot 2 and one KL-MOD of group 4 in slot 4.

If in Setup combinations of KL-MOD assignments are set, one KL-MOD is enough for each combination. In this case, it should be installed in the lowest slot of the combined ventilation groups.

For example, if ventilation groups 2 and 3 are to be settable by one KL-MOD, groups 1 and 4 each have one separate KL-MOD. For this, the KL-MOD assignment „2+3“ must be set in Setup and one KL-MOD each put in module slots 1, 2 and 4, i.e., the KL-MOD the combined groups 2 and 3 must be in slot 2.

5 Commissioning

Commissioning is possible once all necessary external devices have been connected, the wiring has been double-checked, and the batteries have been charged.

First the power supply must be ensured. Only when the batteries have been connected can the mains voltage (230 V AC) be switched on; the green "O.K." LED's on the board and on smoke and heat vent switch 6 light up.

When connecting the batteries, it is of the utmost importance to ensure the correct polarity. Connecting the batteries incorrectly will result in immediate destruction of the board.

The Smoke and Heat Vent Control Unit is now ready for operation, and the individual functions can be tested in turn.

The following functions must be tested during commissioning:

Ventilation function:

Push ventilation pushbutton in the Open direction	- Motors open
Push ventilation pushbuttons in the Open and Closed directions simultaneously	- Motors stop
Push ventilation pushbutton in the Closed direction	- Motors close
Triggering of a rain alarm on the rain detector (push the test pushbutton if present)	- all motors close
Motors should be in the open position!	

Smoke and heat vent function (triggered):

Move the mode selector switch to "Test" and trigger the smoke and heat vent by pressing the red "Trigger" pushbutton on the board	<ul style="list-style-type: none"> - The green "O.K." LED on the board blinks (Test mode) - all motors open - The red trigger LED on the board and on the smoke and heat vent switches blink - The signal buzzer sounds with an alternating frequency
Make the Smoke and Heat Vent Control Unit ready for operation again by pressing the "Reset" pushbutton on the board. Then close the motors by means of the "Close pushbutton" on the board. (Mode selector switch remains in the "Test" position)	<ul style="list-style-type: none"> - all motors close - red LED trigger extinguishes - the buzzer goes silent - The green O.K." LED on the board blinks (Test mode)
Trigger the smoke and heat vent by pressing the "Trigger" pushbutton on the smoke and heat vent switch (mode selector switch remains in the "Test" position)	<ul style="list-style-type: none"> - all motors open - The red trigger LED on the board and on the smoke and heat vent switches blink - The signal buzzer sounds with an alternating frequency - The green "O.K." LED on the board blinks (Test mode)
Make the Smoke and Heat Vent Control Unit ready for operation again by pressing the "Reset" pushbutton on the smoke and heat vent switch. Then close the motors by means of the "Close" pushbutton on the smoke and heat vent switch (mode selector switch remains in the "Test" position)	<ul style="list-style-type: none"> - all motors close - red LED trigger extinguishes - the buzzer goes silent - The green "O.K." LED on the board blinks (Test mode)

<p>Use test unit for signal series type ECO 1000RTU to trigger an automatic ECO type detector (mode selector switch remains in the "Test" position)</p>	<ul style="list-style-type: none">- all motors open- The red trigger LED on the board and on the smoke and heat vent switches blink- The signal buzzer sounds with an alternating frequency- The green "O.K." LED on the board blinks (Test mode)
<p>Make the Smoke and Heat Vent Control Unit ready for operation again by pressing the "Reset" pushbutton on the board. Then close the motors by means of the "Close pushbutton" on the board. (Now move mode selector switch to the "Normal" position)</p>	<ul style="list-style-type: none">- all motors close- red LED trigger extinguishes- the buzzer goes silent- The green "O.K." LED on the board is lit continuously (Normal operation)


6 Operator action



6.1 Display and operator control elements on the board

The Smoke and Heat Vent Control Unit 10A-4-1 has a number of operator control and display elements on the board, thus providing a clear, detailed indication of the individual operating states and faults. The operator control elements can be used to make various settings and activate various functions on the Smoke and Heat Vent Control Unit. The following illustration shows the operator control elements on the board of the Smoke and Heat Vent Control Unit 10A-4-1:

With the exception of the ventilation function, the Smoke and Heat Vent Control Unit can be operated from the board alone

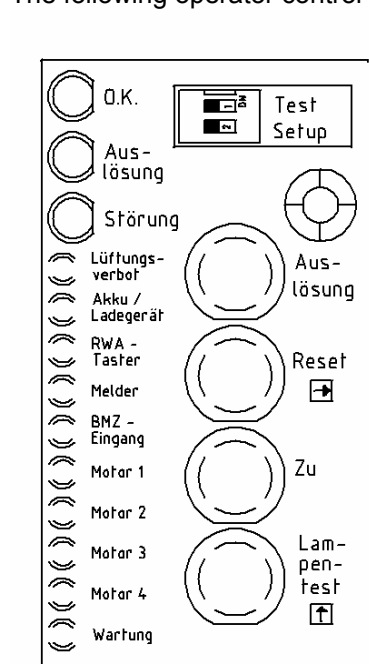The following operator control elements are available:



- Pushbutton „Trigger“
- “Reset” pushbutton 
- Pushbutton „Close“
- Pushbutton „Lamp test “ 
- „Test“
- Slide switch „Setup“



The following additional display elements are available:

- green LED „O.K.“
- red LED „Trigger“
- yellow LED „Fault“
- LED „No ventilation“
- LED „Battery / charger“
- LED „Smoke and heat vent switch“
- LED „Detector“
- LED „Fire alarm center input“
- LED “Motor 1”
- LED “Motor 2”
- LED “Motor 3”
- LED “Motor 4”
- LED „Maintenance“

Fig. 10: Displays and controls

The following table provides an overview of the various functions and settings of the individual operator control elements on the board of the Smoke and Heat Vent Control Unit 10A-4-1:

Operator action	Function / effect
Pressing the “Trigger” pushbutton	<ul style="list-style-type: none"> - all motors open - The red trigger LED on the board and on the smoke and heat vent switches blink - The signal buzzer sounds with an alternating frequency -
Pressing the “Reset” pushbutton	<ul style="list-style-type: none"> - Triggering of smoke and heat vent is reset - The signal buzzer goes silent - Automatic alarm forwarding is inactive - The red trigger LEDs on the board and on the smoke and heat vent switches are extinguished

Operator action	Function / effect
Pressing the "Close" pushbutton	- All motors close (only if smoke and heat vent triggering is not present) → ventilation closed
Pressing the "Lamp test" pushbutton	- All LED's on the board and on the connected smoke and heat vent switches are lit; they are extinguished when the Reset pushbutton is pressed - The signal buzzer sounds as long as the "Lamp test" pushbutton is pressed - The lamp test automatically ends after 15 minutes
„Buzzer" jumper <i>(on the right of the transformer)</i>	- If the jumper is on, the internal signal buzzer is switched on when triggering or a fault occur - If the jumper is off, the internal signal buzzer is not activated
"Mode" slide switch in "ON" position	- The Smoke and Heat Vent Control Unit is in Test mode - The green "O.K." LED on the board blinks - Automatic alarm forwarding is inactive - The diagnostic LED's on the board can be activated in the event of a power outage
"Mode" slide switch in "OFF" position	- Normal state of the control unit - The fire brigade relay is switched when triggering occurs
„Setup" slide switch in „OFF" position	- Normal state of the control unit
„Setup" slide switch in „ON" position <i>[Press Reset  and Lamp test  pushbuttons at the same time]</i>	- Setup mode active (see Programming) - all LEDs blink at high frequency

The following table provides an overview of the various display states of the individual display elements on the board of the Smoke and Heat Vent Control Unit 10A-4-1:

Display	State
Mode „O.K."	- Is lit continuously so long as no fault is detected - blinks in Test mode - Is extinguished when a fault is active or maintenance is needed
"Trigger" LED	- blinks when smoke and heat vent is triggered
"Fault" LED	- blinks when a fault is detected - flashes during a power outage - blinks when maintenance is needed (see Maintenance LED)
"No ventilation!" LED	- Lit continuously when wind/rain alarm is active - blinks or flashes when the battery capacity drops below a certain limit (72 hours emergency power supply must be ensured)
"Battery/charger" LED	- blinks when battery not detected - flashes when there is exhaustive discharge of battery (battery voltage < 18V), extinguished again when battery has been charged > 20V
"Smoke and heat vent switch" LED	- Fault in the smoke and heat vent switch line - - when triggering by an external control unit pushbutton occurs - blinks when there is a line interruption - flashes when there is a line short-circuit (only if „18k" has been set in Setup)
"Detector" LED	- Fault in the detector line - lights when triggering by an automatic detector occurs. - blinks when there is a line interruption - flashes when there is a short circuit in the line

Display	State
“Central fire alarm system input” LED	<ul style="list-style-type: none"> - Fault in the fire alarm system line - when triggering by an external Fire Alarm System occurs. - blinks when there is a line interruption - flashes when there is a short circuit in the line
“Motor 1” LED	<ul style="list-style-type: none"> - Fault in motor line 1 - when there is a line interruption / motor fuse SI3 defective (short circuit in the motor line)
“Motor 2” LED	<ul style="list-style-type: none"> - Fault in motor line 2 - blinks when there is a line interruption / motor fuse SI4 defective (short circuit in the motor line)
“Motor 3” LED	<ul style="list-style-type: none"> - Fault in motor line 3 - blinks when there is a line interruption / motor fuse SI5 defective (short circuit in the motor line)
“Motor 4” LED	<ul style="list-style-type: none"> - Fault in motor line 4 - blinks when there is a line interruption / motor fuse SI6 defective (short circuit in the motor line)
„Maintenance“ LED	<ul style="list-style-type: none"> - blinks if maintenance is needed

6.2 Audible signals

When in operation, the control unit buzzer provides audible signals indicating fault states and action completed:

Caution !

The signals can be heard when the „Buzzer“ jumper is active.

Constant signal:

Fault state (The LED’s indicate the cause)

or

Lamp test pushbutton is pressed (all LEDs light).

Constant signal with alternating pitch:

Control unit trigger state. The red „Trigger“ LED blinks.

1x long beep (confirm signal)

after exiting SETUP mode:

Confirms that all settings have been adopted

6.3 Fuses on the board

To protect the electronic components, the board of the Smoke and Heat Vent Control Unit 10A-4-1 contains five fuses (glass tube fuses 5 x 20mm). The following table shows the functions and ratings of the individual fuses:

Designation:	Function:	Rating:
SI2	24 V AC secondary fuse downstream of transformer	2.0 A slow-blow
SI3	Motor line 1 fusing	5.0 A slow-blow
SI4	Motor line 2 fusing	5.0 A slow-blow
SI5	Motor line 3 fusing	5.0 A slow-blow
SI6	Motor line 4 fusing	5.0 A slow-blow



6.4 State at time of delivery

Because of the many options described here for setting the parameters of the Smoke and Heat Vent Control Unit 10A-4-1, the state of the control unit at the time of delivery will now be summarised in tabular form:

„Test“ slide switch	„Test“ slide switch is at position „OFF“ → automatic trigger forwarding in smoke and heat vent case
„Setup“ slide switch	Setup slide switch is at position „OFF“
„Buzzer“ jumper	Jumper is active → Buzzer is active
The following functions and settings, resp. are set in programming mode:	
Ventilation mode group 1	set to constant mode
Ventilation mode group 2	set to constant mode
Ventilation mode group 3	set to constant mode
Ventilation mode group 4	set to constant mode
Comfort ventilation module assignment	set to „all individually“
Serial resistance 0R / 18k function	set to „18k“ (short-circuit monitoring of the lines is active)
Detector dependence	set to 1 detector
Trigger if fault occurs	disabled
Number of detectors	Set to 1 – 10 automatic detectors

7 Programming (SETUP)

In SETUP mode, many special functions and settings can be programmed:

This is done with the „Setup“ DIP switch which if the program is to be changed, must be at ON while at the same time the „Reset“  pushbutton and the „Lamp test“  pushbutton must be set ON.

The LED „No ventilation“ on the board now blinks at very high frequency which indicates that Setup mode is active.

Function can be changed with 2 pushbuttons on the board and are displayed by LEDs:

The 4 large LEDs „O.K.“, „Trigger“ and „Fault“ and „No ventilation!“ indicate which function has been selected and the 7 small red LEDs indicate the current setting of that function.

LED	Function					
	Constant/Push Group 1	Constant/Push Group 2	Constant/Push Group 3	Constant/Push Group 4	KL-MOD assignment	OR 18k
„O.K.“	•	•	•	•	•	•
„Trigger“	•	•	•	☀	☀	☀
„Fault“	•	☀	☀	•	•	☀
„No ventilation!“	☀	•	☀	•	☀	•
	(☀ LED blinks • LED dark)					
	Setting					
„Detector“	-	-	-	-	1+2+3+4	-
„Fire alarm input“	-	-	-	-	2+3+4	-
„Motor 1“	-	-	-	-	1+2+3	-
„Motor 2“	-	-	-	-	1+2, 3+4	-
„Motor 3“	-	-	-	-	3+4	-
„Motor 4“	OPEN/CLOSE pushing	OPEN/CLOSE pushing	OPEN/CLOSE pushing	OPEN/CLOSE pushing	2+3	-
„Maintenance“	only pushing OPEN	only pushing OPEN	only pushing OPEN	only pushing OPEN	1+2	OR
(all 7 LEDs off)	Constant	Constant	Constant	Constant	all individually	18k

LED	Function					
		Detector dependent	Trigger on fault	Number of Detector	Function of the fault-relay	
„O.K.“	-	☀	☀	☀	☀	
„Trigger“	-	•	•	•	•	
„Fault“	-	•	•	☀	☀	
„No ventilation!“	-	•	☀	•	☀	
	(☀ LED blinks • LED dark)					
	Setting					
„Detector“	-	-	-	-	-	
„Fire alarm input“	-	-	-	-	-	
„Motor 1“	-	-	All lines	-	-	
„Motor 2“	-	-	Interruption	-	-	
„Motor 3“	-	-	BMZ-Line	-	-	
„Motor 4“	-	2 detectors with notice	Detector	26 to 50	Alarm- relay	
„Maintenance“	-	2 detectors	Control unit pushbuttons	11 to 25	Wind- and Rain- relay	
(all 7 LEDs off)	-	1 detector	Off	1 to 10	Fault- relay	

The 2 board pushbuttons „Reset “ and „Lamp test “ select the functions and change their settings:

„Reset  “ pushbutton	next function (to the right)
„Lamp test  “ pushbutton	Setting one position up

Any change of a position is adopted by the control unit immediately, however, to protect the changed setting(s) from the effects of a power outage, the „Setup“ DIP switch must be set OFF again.

Setup mode is exited and the setting saved about 60s after the last press of a button.

8 Locating faults / troubleshooting

All faults can be detected and isolated with the aid of the diagnostic LEDs on the board. Errors that are caused by incorrect wiring of the components can, of course, not be diagnosed. If malfunctions occur which cannot be detected with the aid of the diagnostic LED's, the first step should be to verify the wiring of the external components.

If the Smoke and Heat Vent Control Unit has detected a fault, the green "Mode" LED is extinguished and the yellow "Fault" LED blinks or flashes.

Diagnostic LED display on the board	Cause	Remedy
red "Detector" LED <u>blinks</u>	Line interruption in the detector line	<ul style="list-style-type: none"> ➤ Terminate detector line with 33K resistor ➤ Investigate cable for interruption
red "Detector" LED <u>flashes</u>	Short-circuit in the detector line	<ul style="list-style-type: none"> ➤ Investigate cable for short-circuit
red "Detector" LED <u>lights</u>	Trigger automatic by detector	<ul style="list-style-type: none"> ➤ Confirm Reset
red "Smoke and heat vent switch" LED <u>blinks</u>	Line interruption in the smoke and heat vent switch line	<ul style="list-style-type: none"> ➤ Terminate smoke and heat vent switch line with 33K resistor ➤ Investigate cable for interruption
red "Smoke and heat vent switch" LED <u>lights</u>	Trigger by smoke and heat vent switch	<ul style="list-style-type: none"> ➤ Confirm Reset
red "Smoke and heat vent switch" LED <u>flashes</u>	Short-circuit in the smoke and heat vent switch line	<ul style="list-style-type: none"> ➤ Investigate cable for short-circuit
red LED „Fire alarm center input“ <u>blinks</u>	Line interruption in fire alarm center line	<ul style="list-style-type: none"> ➤ Terminate fire alarm center line with 33K resistor ➤ Investigate cable for interruption
red LED „Fire alarm center input“ <u>flashes</u>	Short-circuit in the fire alarm center line	<ul style="list-style-type: none"> ➤ Investigate cable for short-circuit
red LED „Fire alarm center input“ <u>lights</u>	triggering by an external Fire Alarm Center (BMZ) .	<ul style="list-style-type: none"> ➤ Confirm Reset
red LED „Motor line (1 – 4)“ <u>blinks</u>	Line interruption in the respective motor line or related motor fuse defective	<ul style="list-style-type: none"> ➤ Check SI3 to SI6 motor fuses ➤ Investigate cable for short-circuit ➤ Investigate cable for interruption ➤ For third-party drives, fit 33K resistor
red "No ventilation!" LED <u>blinks</u>	Battery capacity is too low	<ul style="list-style-type: none"> ➤ Wait until battery has recharged completely
red "No ventilation!" LED <u>gives constant light</u>	Wind/rain alarm is active or fault at the wind/rain detector	<ul style="list-style-type: none"> ➤ Wait until wind/rain alarm has dropped out ➤ Check connected wind/rain detector
red "Battery/charger" LED <u>blinks</u>	Battery not connected	<ul style="list-style-type: none"> ➤ Check battery and connect if necessary
red "Battery/charger" LED <u>flashes</u>	Exhaustive discharge of battery (U < 18 V)	<ul style="list-style-type: none"> ➤ Connect new batteries !!
yellow "Fault" LED <u>flashes</u>	Power outage	<ul style="list-style-type: none"> ➤ Check 230 V AC mains voltage ➤ Check SI2 secondary fuse

Malfunction	Cause	Remedy
Connected automatic detectors are not triggered	Wrong polarity	<ul style="list-style-type: none"> ➤ Check polarity and connections, rectify fault
Smoke and heat vent switch malfunction	Incorrect wiring	<ul style="list-style-type: none"> ➤ Check wiring

9 Maintenance

Smoke and heat vent systems are safety systems intended to protect human lives, health, and material property.

For this reason, maintenance of the smoke and heat vent system must be carried out at regular intervals, at least once per year, in accordance with DIN 18232, the VdS directives, and the manufacturer's guidelines. Functional testing, commissioning, maintenance and any repairs on the smoke and heat vent system may only be carried out by authorised specialists

Required maintenance is indicated by the buzzer and visually by the Fault LED at the control unit pushbutton and the Maintenance LED on the control unit board.

Before carrying out work on the open control unit the technician must earth him or herself by touching the earthing connector !!!!

Caution !

You must consult with us before alarm or fault forwarding to the fire brigade or building control system by means of the integrated fire brigade relay or fault relay.

Smoke and Heat Vent Control Unit 10A-4-1:

- Visual inspection of the Smoke and Heat Vent Control Unit
- Check 230 V AC mains voltage
- Check fuses SI1 to SI6
- Check battery voltage (approx. 27 V DC, but not less than 24 V DC)
- After 4 years the batteries must be replaced and the old batteries disposed of
- Examine terminal connections for secure fit
- Inspect cables for possible damage
- Carry out function test (see 5 Commissioning); place "Mode" slide switch in "ON" position
- Test the functions of the Smoke and Heat Vent Control Unit by pressing all external smoke and heat vent switches, automatic detectors and ventilation pushbutton
- Test display elements of the externally connected smoke and heat vent switches and automatic detectors
- Test the fault and alarm forwarding functions; to do this, place the "Test" slide switch in the "OFF" position

10 Technical data


Type:	Smoke and Heat Vent Control Unit 10A-4-1
Housing:	Steel plate housing with cylinder lock 455 Dimensions W/H/D: 335/520/105 [mm] Colour: grey similar to RAL 9002
Protection rating:	IP 30
Temperature range:	Temperature class III according to VdS 2581 (-5°C to 40°C) Temperature class III according to VdS 2593 (-5°C to 40°C)
Rated voltage:	230 VAC / 50 Hz
Rated power:	46 VA
Battery rated voltage:	24 VDC (2 x 12 VDC)
Battery rated capacity:	7,0 or 7,2 Ah
Motor line breaking capacity:	max. 5 A rated current
Breaking capacity, center:	max. 10 A rated current
Number of motor lines:	4
Number of ventilation groups:	4
Number of trigger groups:	1
Number of fire alarm center lines:	1
Number of smoke and heat vent pushbuttons 6, 7:	10
Number of automatic detectors	1 – 10, 11 – 25 or 26 - 50 (see programming) (smoke detector ECO1003, maximum heat detector ECO1005T)
OPEN display output:	24 V, max. 50 mA each

Terminals:

Motor terminals:	4 mm ² (flexible), 6 mm ² (solid)
Mains connection terminals:	2.5 mm ² , plug-in type
Fault and alarm relay:	2.5 mm ²
Other terminals:	1.5 mm ² (flexible), 2.5 mm ² (solid)

Line monitoring:	Motor line for line break/fuse blow Smoke and heat vent switch line for line break and short-circuit Fore alarm system for line break and short-circuit Detector line for line break and short-circuit Battery line for line break
------------------	--

Trigger relay:	Breaking capacity 60 V (AC/DC) / 3 A
Fault relay:	Breaking capacity 60 V (AC/DC) / 3 A

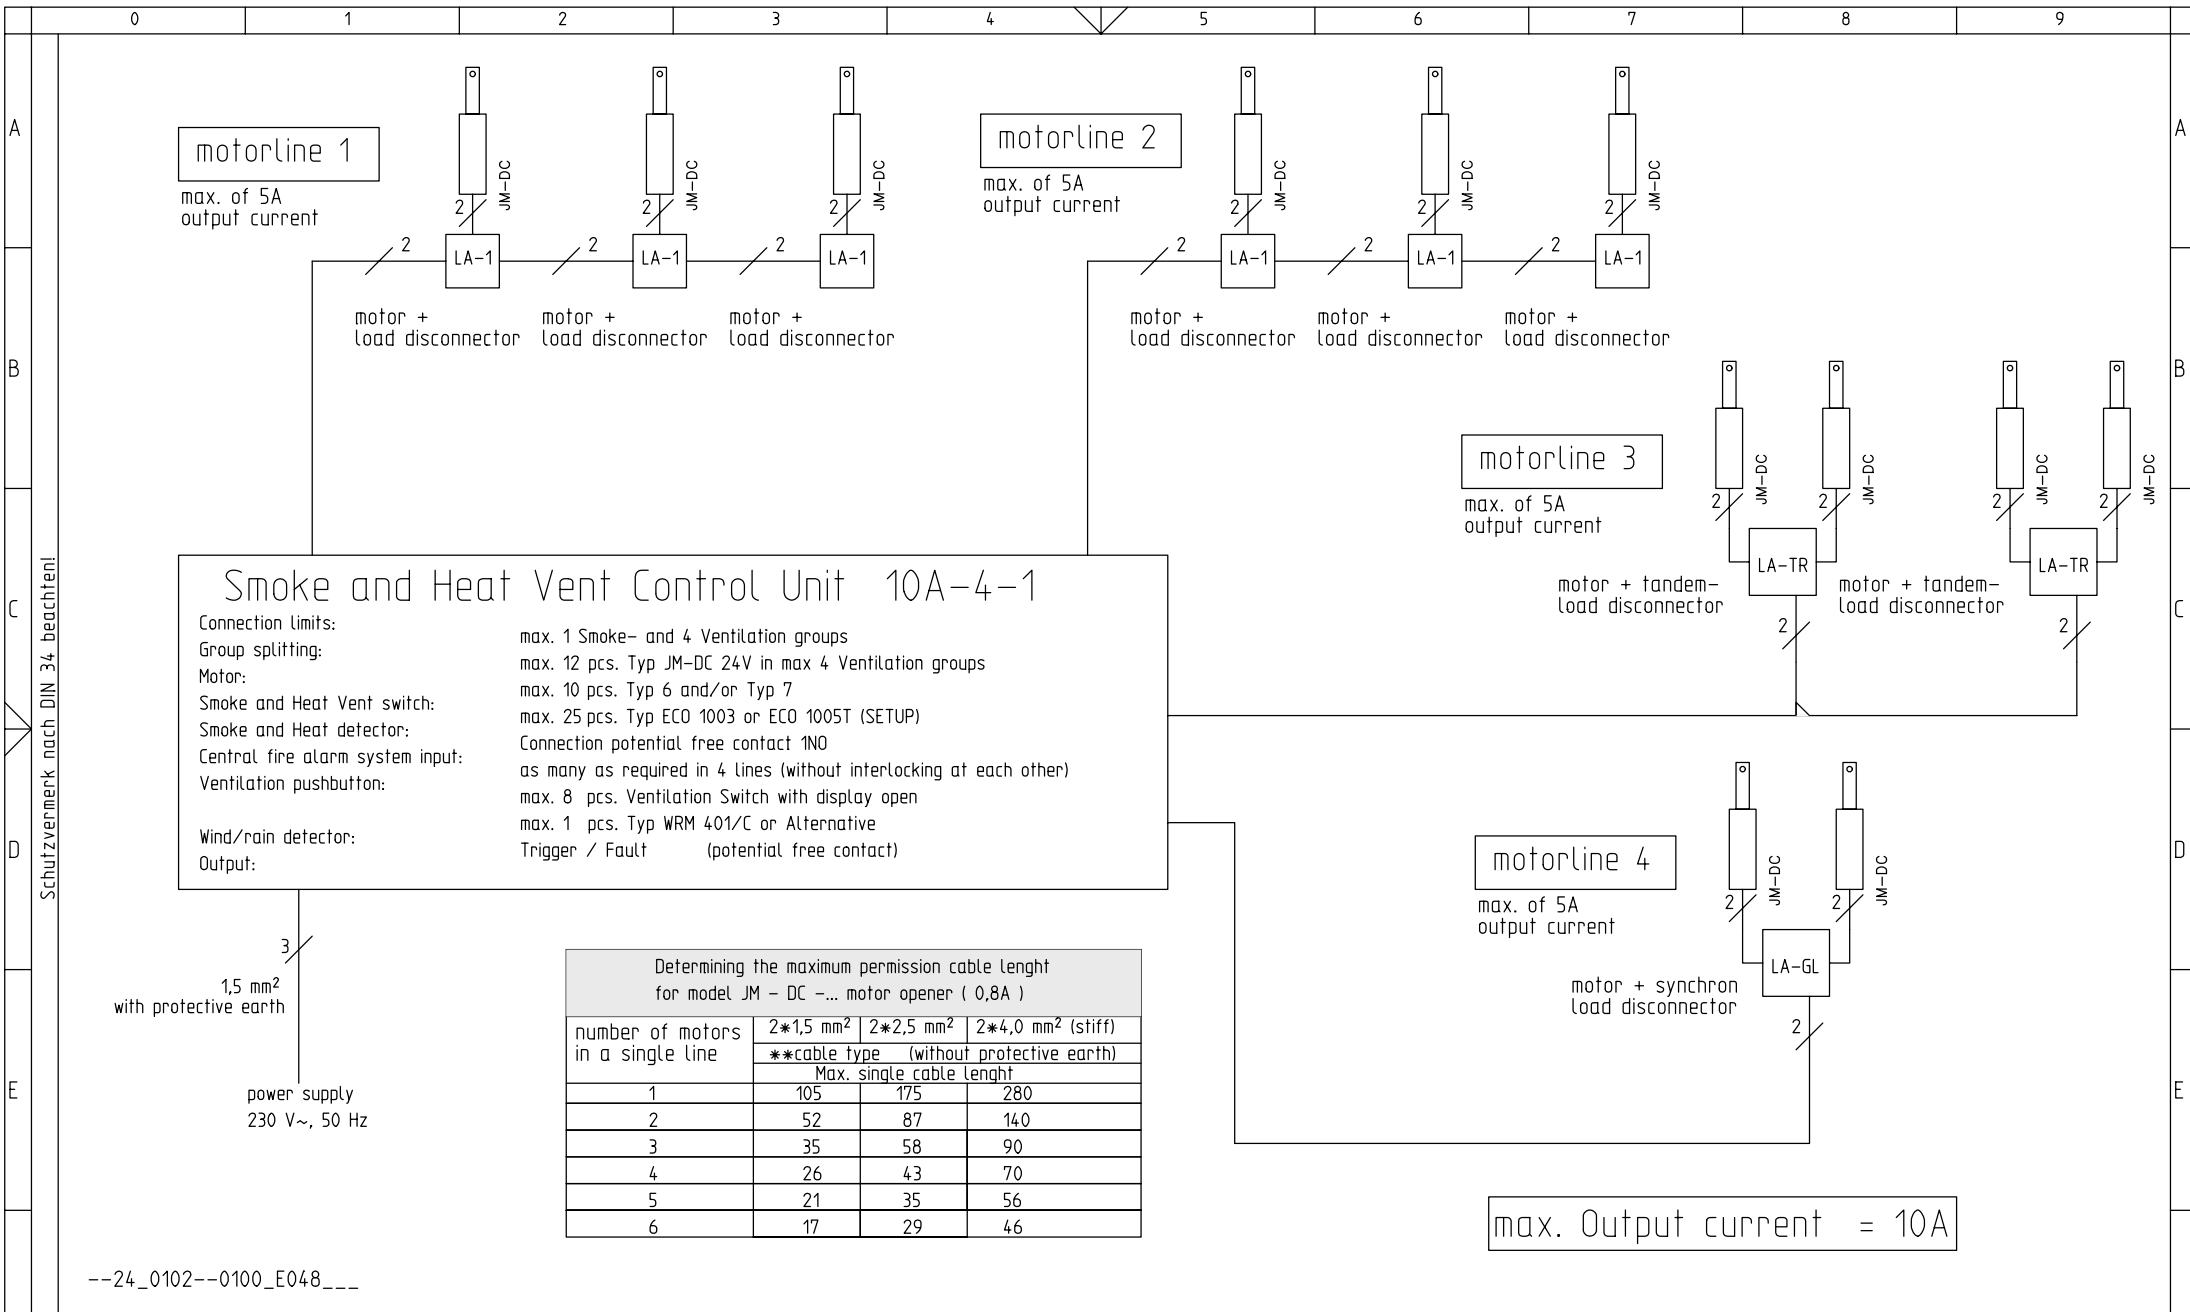


vorherige Seite:							Kunde	Projektbeschreibung	Blattbeschreibung	nächste Seite: 2		
Zustand	Anderung	Datum	Name	Projekt	Datum	Name	RWA-Zentrale 10A-4-1 documentation	Connection diagram 24V motors	Kommission:	Anlage: =		
		20.01.2010		Bearb.	16.06.2005	Krause				Standort	Ort: +	
				Gepr.						Auftragsnr.:	Blatt: 1	
				Norm			Urspr.	Ers.f	Ers.d		von 9	

Schutzvermerk nach DIN 34 beachten!

--24_0102--0100_E048__

Smoke and Heat Vent Control Unit 10A-4-1

Connection limits: max. 1 Smoke- and 4 Ventilation groups
Group splitting: max. 12 pcs. Typ JM-DC 24V in max 4 Ventilation groups
Motor: max. 10 pcs. Typ 6 and/or Typ 7
Smoke and Heat Vent switch: max. 25 pcs. Typ ECO 1003 or ECO 1005T (SETUP)
Smoke and Heat detector: Connection potential free contact 1NO
Central fire alarm system input: as many as required in 4 lines (without interlocking at each other)
Ventilation pushbutton: max. 8 pcs. Ventilation Switch with display open
Wind/rain detector: max. 1 pcs. Typ WRM 401/C or Alternative
Output: Trigger / Fault (potential free contact)

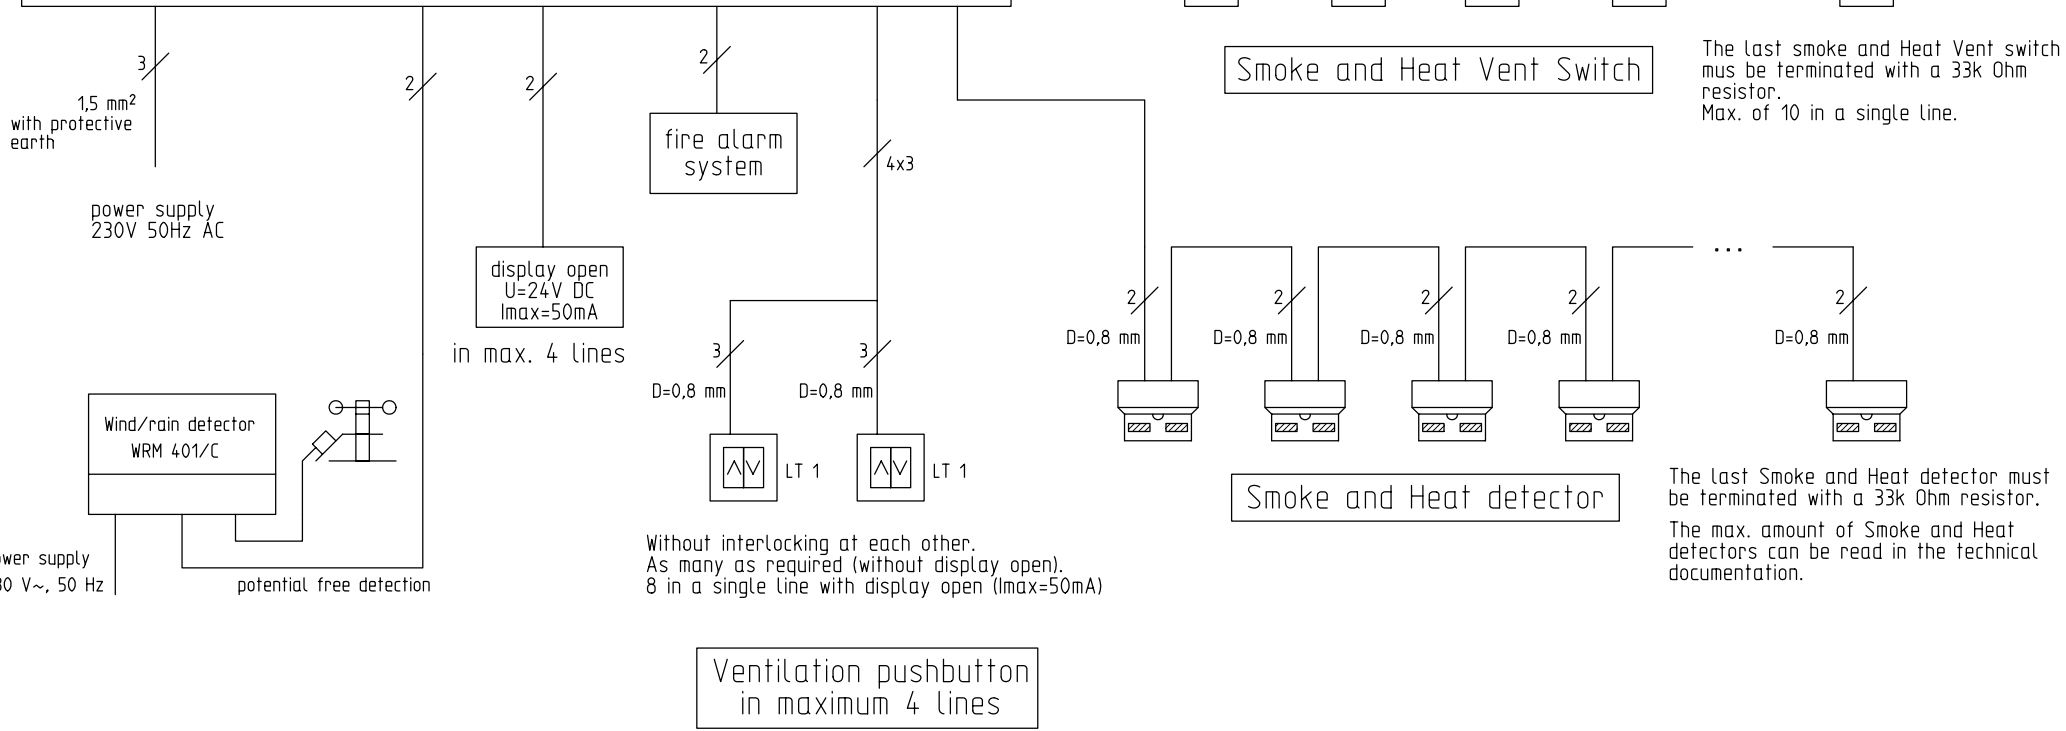


--24_0102--0100_E048_---

vorherige Seite: 1							Kunde	Projektbeschreibung	Blattbeschreibung	nächste Seite: 3		
Zustand	Änderung	Datum	Name	Projekt	Datum	Name	RWA-Zentrale 10A-4-1 documentation	Connection diagram	Kommission:		Antlage: =	
		20.01.2010		Bearb.	16.03.2005	Krause			Smoke Vent control unit 10A-4-1		Ort: +	
				Gepr.					Standort	Auftragsnr.:		Blatt: 2
				Norm					Urspr.	Ers.f	Ers.d	von 9
0	1	2	3	4	5	6	7	8	9			

Schutzvermerk nach DIN 34 beachten!


Single mode

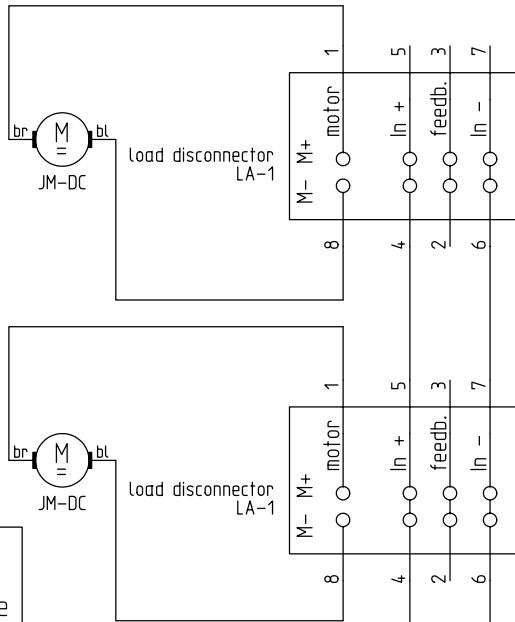

max. 6 motors
24V DC / 0,8A
with LA-1 in Single Mode


There are 4 motor lines.
Do not exceed the max. output
current of 5A on each motor line.
The max. output current of all lines
is limited by 10A.

Tandem mode

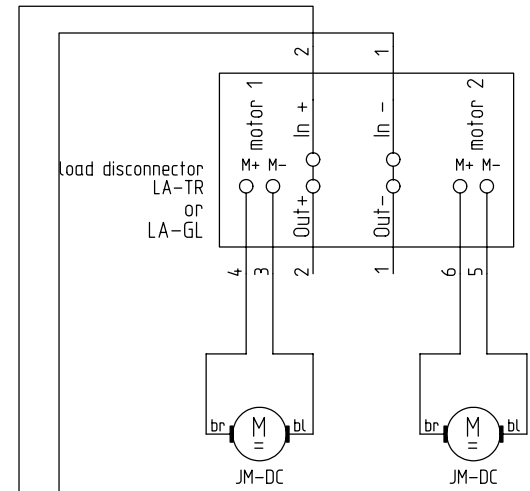


max. 3 x 2 motors
with LA-TR, LA-GL2 or
LA-GL/A in Tandem Mode
or Synchron Mode

Schutzvermerk nach DIN 34 beachten!

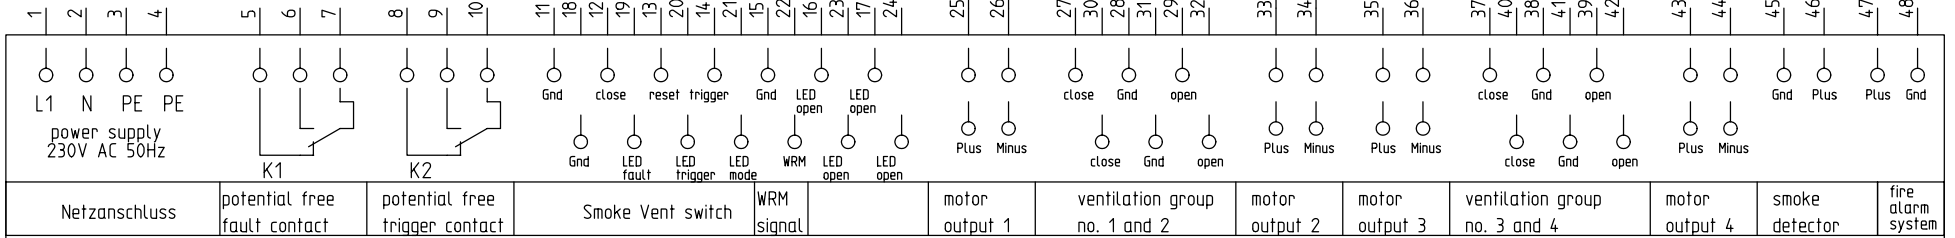


 Smoke and Heat Vent Control Unit 10A-4-1



--24_0102--0100_E048__

vorherige Seite: 2							Kunde	Projektbeschreibung	Blattbeschreibung	nächste Seite: 4		
Zustand	Aenderung	Datum	Name	Projekt	Datum	Name	RWA-Zentrale 10A-4-1 documentation	motor 24V DC single and tandem mode	Kommission:		Anlage: =	
		20.01.2010		Bearb.	16.03.2005	Krause			Smoke Vent control unit 10A-4-1		Ort: +	
				Gepr.					Standort	Auftragsnr.:	Blatt: 3	
				Norm					Urspr.	Ers.f	Ers.d	von 9

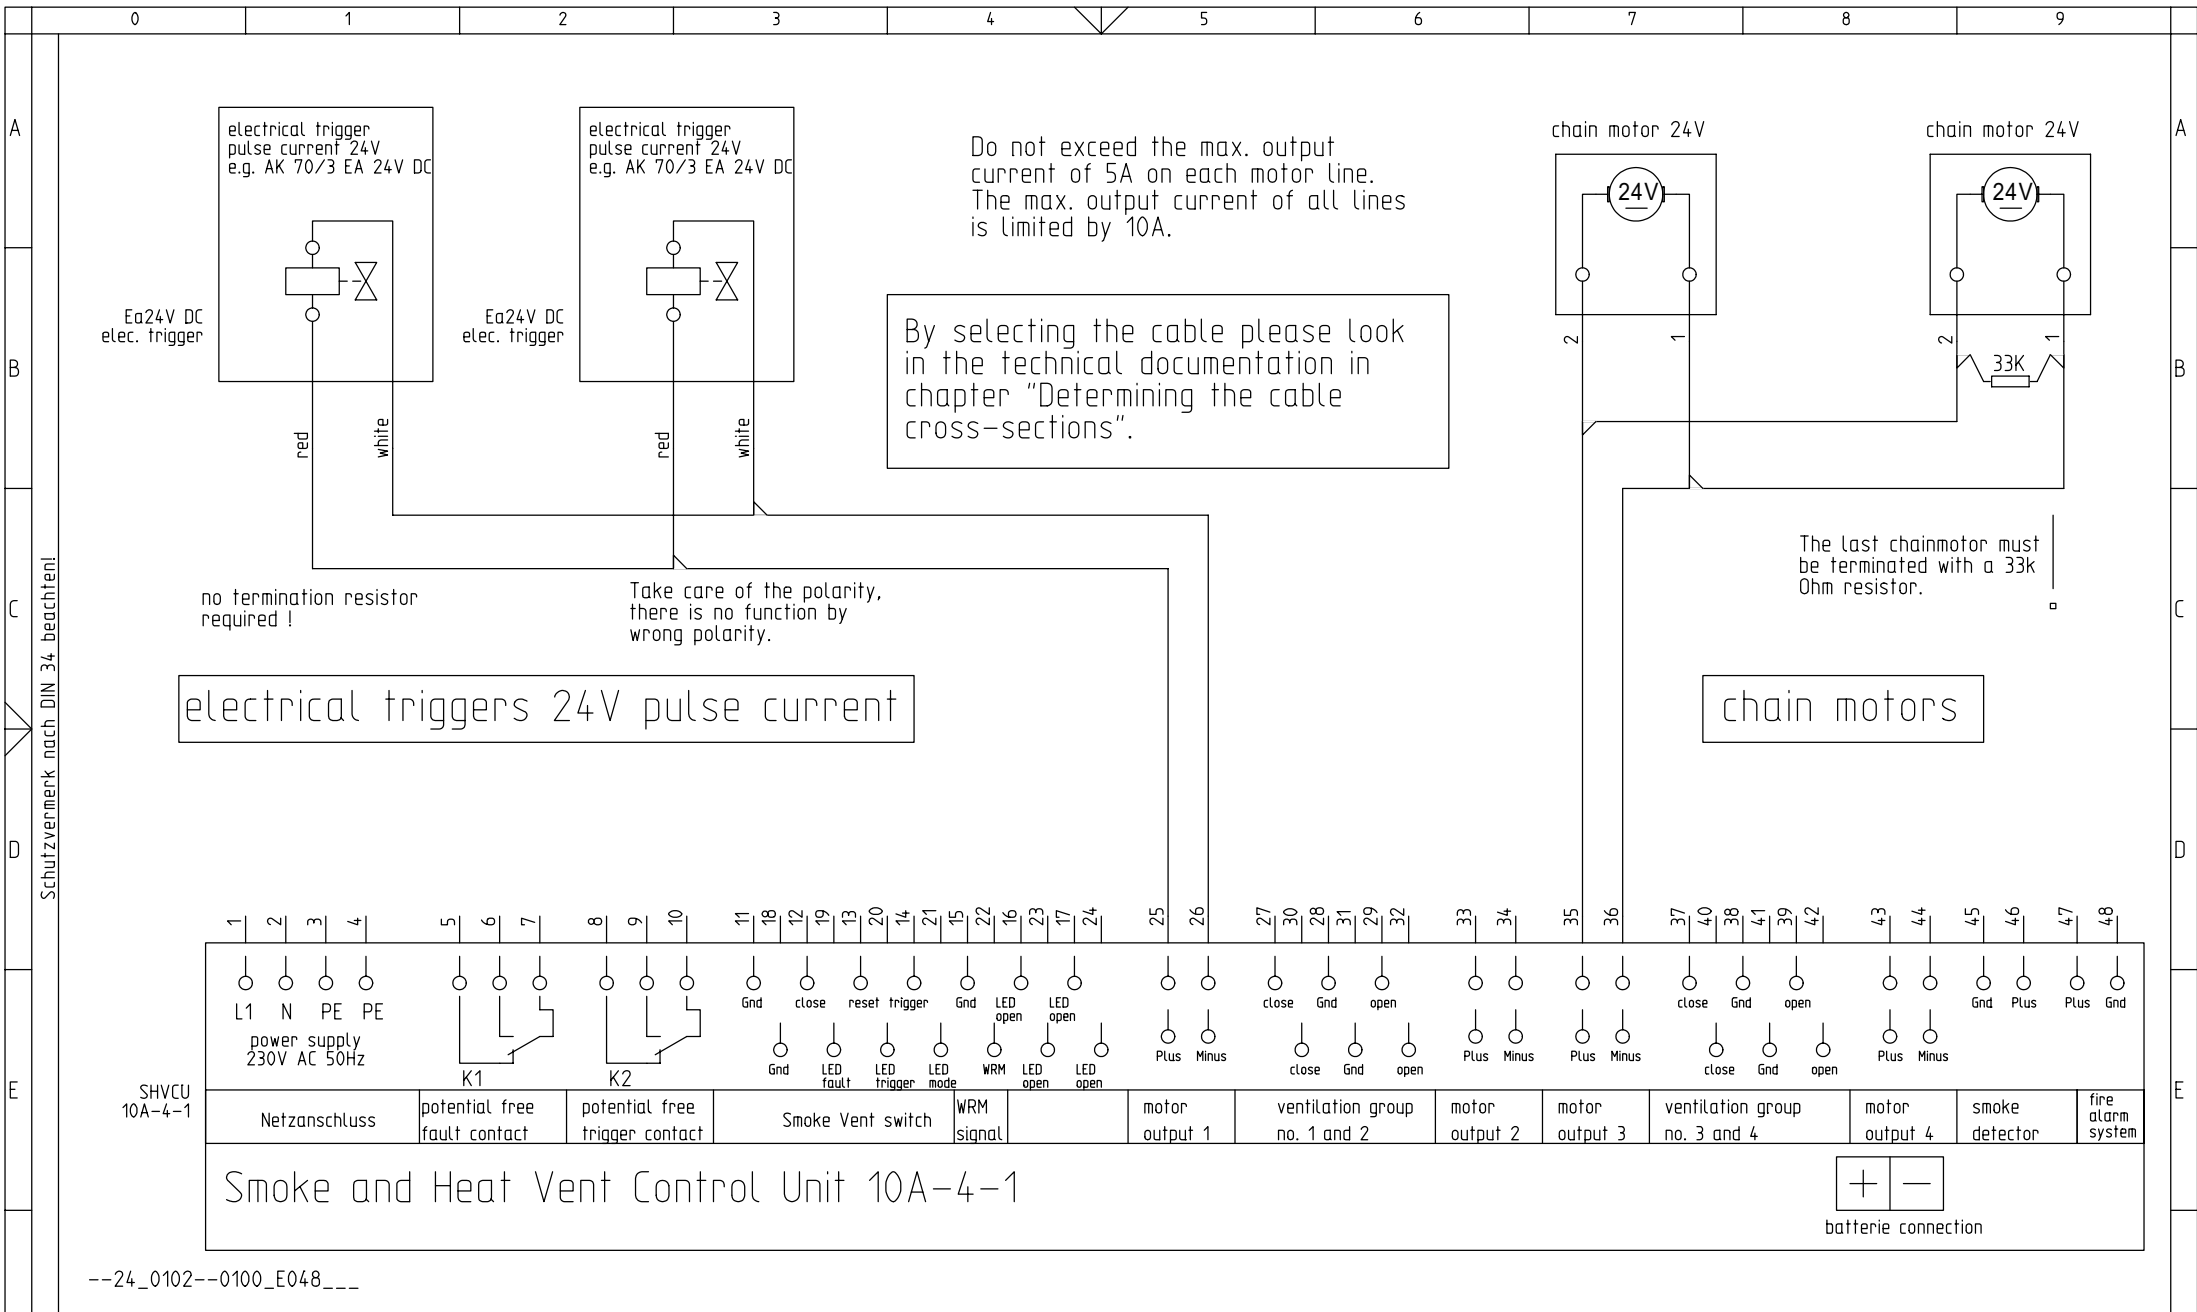

--24_0102--0100_E048_--

vorherige Seite: 3							Kunde			Projektbeschreibung			Blattbeschreibung			nächste Seite: 5		
Zustand	Anderung	Datum	Name	Projekt	Datum	Name	RWA-Zentrale 10A-4-1 documentation			chain motors electrical triggers			Kommission:		Anlage: =			
		20.01.2010		Bearb.	16.03.2005	Krause							Smoke Vent control unit 10A-4-1		Ort: +			
				Gepr.									Standort		Auftragsnr.:		Blatt: 4	
				Norm									Urspr.		Ers.f		Ers.d	
0	1	2	3	4	5	6	7	8	9									


Schutzvermerk nach DIN 34 beachten!

Schutzvermerk nach DIN 34 beachten!


The last smoke and Heat Vent switch must be terminated with a 33k Ohm resistor.

Smoke and Heat Vent switch Type 6


max. of 10 in a single line

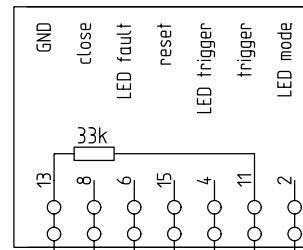

Smoke and Heat Vent switch Type 7

 


Smoke and Heat Vent switch Type 6

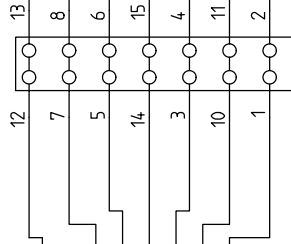


Connecting diagram 11 up to 25 detectors
You will find the 15k Ohm resistor in a bag with the batterie bridge.

While connecting only 11-25 pcs. the last detector must be terminated with a 15kOhm resistor. (SETUP adjustments)

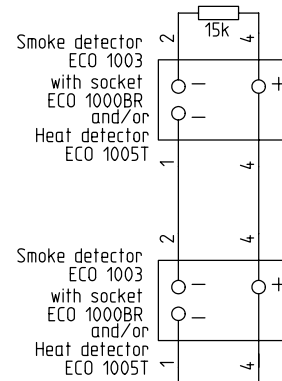


Connecting diagram 0 up to 10 detectors


While connecting only 0-10 pcs. the last detector must be terminated with a 33k Ohm resistor. (standard adjustment)

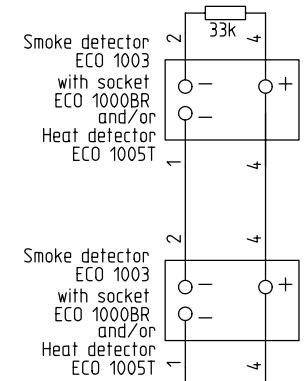

OR

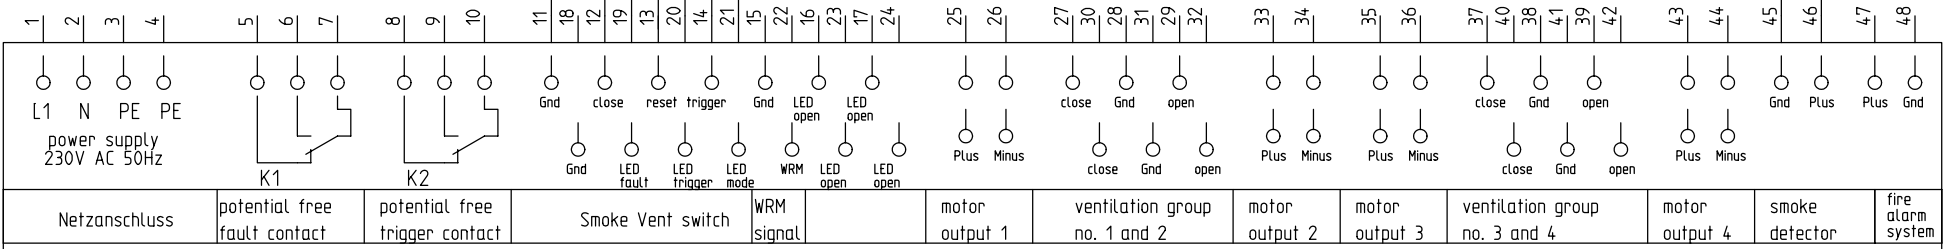

 Smoke and Heat Vent Control Unit 10A-4-1




--24_0102--0100_E048__

vorherige Seite: 4							Kunde			Projektbeschreibung			Blattbeschreibung			nächste Seite: 6		
Zustand	Aenderung	Datum	Name	Projekt	Datum	Name	RWA-Zentrale 10A-4-1 documentation			Smoke and Heat Vent switch Smoke detector connecting diagram			Kommission:		Anlage: =			
		18.10.2007		Bearb.	16.03.2005	Krause							Smoke Vent control unit 10A-4-1		Ort: +			
				Gepr.									Standort		Auftragsnr.:		Blatt: 5	
				Norm			Urspr.	Ers.f	Ers.d			von 9						

max. power of the display output:
24V DC / 50mA P=1,2W


without interlocking at each other

Max. of 8 in a single line

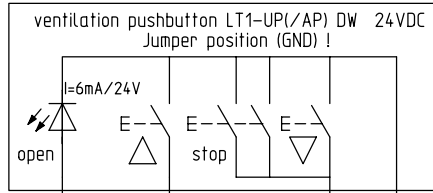


On each pulse in open direction the display output will be switched.
8 minutes after a pulse to close direction the output will be reseted.


as many as required as many as required as many as required

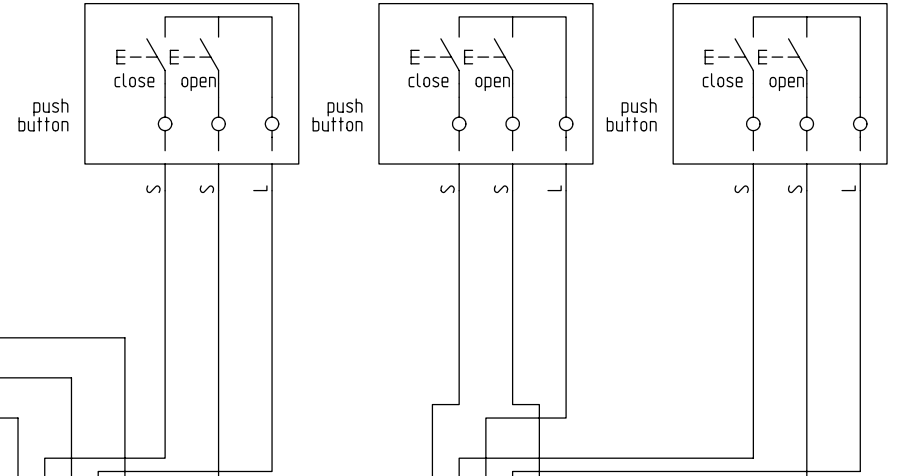

Schutzvermerk nach DIN 34 beachten!

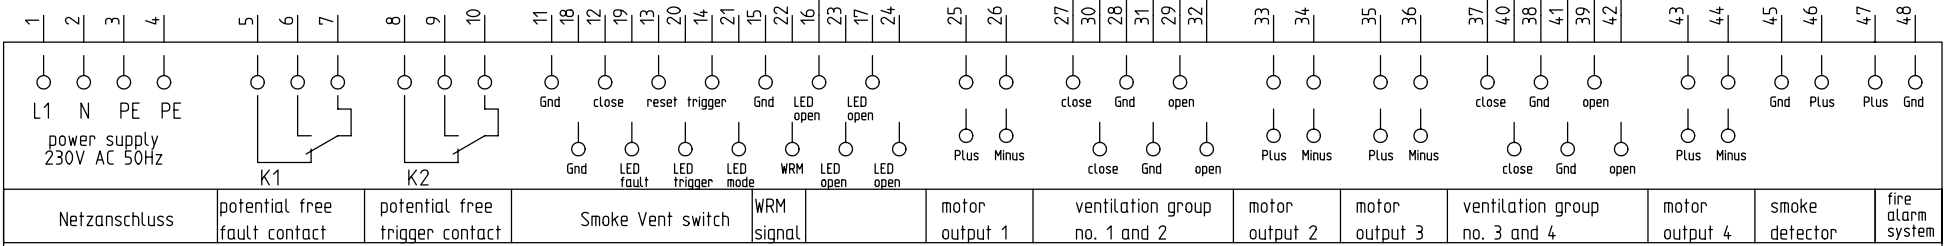

 Smoke and Heat Vent Control Unit 10A-4-1



--24_0102--0100_E048_--



vorherige Seite: 5							Kunde		Projektbeschreibung			Blattbeschreibung		nächste Seite: 7		
Zustand	Änderung	Datum	Name	Projekt	Datum	Name	RWA-Zentrale 10A-4-1			Ventilation pushbutton		Kommission:		Anlage: =		
		20.01.2010		Bearb.	16.03.2005	Krause	documentation			display open		Smoke Vent control unit 10A-4-1		Ort: +		
				Gepr.			Urspr.			Ers.f		Standort		Auftragsnr.:		
				Norm			Ers.f			Ers.d				Blatt: 6		
							Ers.f			Ers.d				von 9		

Please consider the specific Technical Documentation while connecting a Wind/rain detector !!

While connecting an alternative Wind/rain detector, please consider it will have a potential free contact closing by wind / rain.


While Wind/rain clamp 5 and 6 are short-circuiting with contact of Wind/rain detector.

power supply 230V 50Hz
use a separat fuse !!

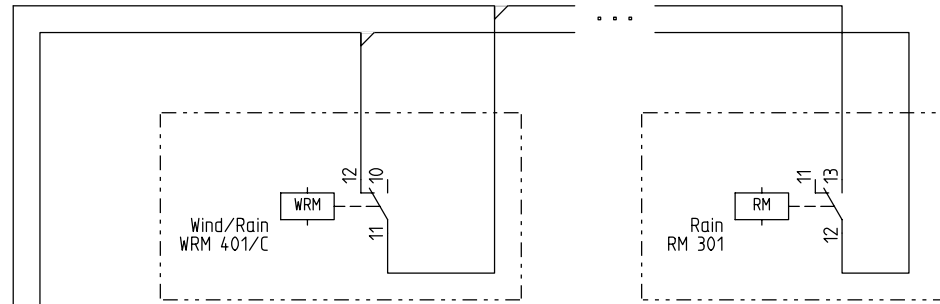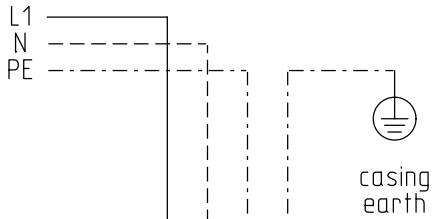

Connection (W)RM 401/C
(use only the potential free contacts)

Connection RM 301

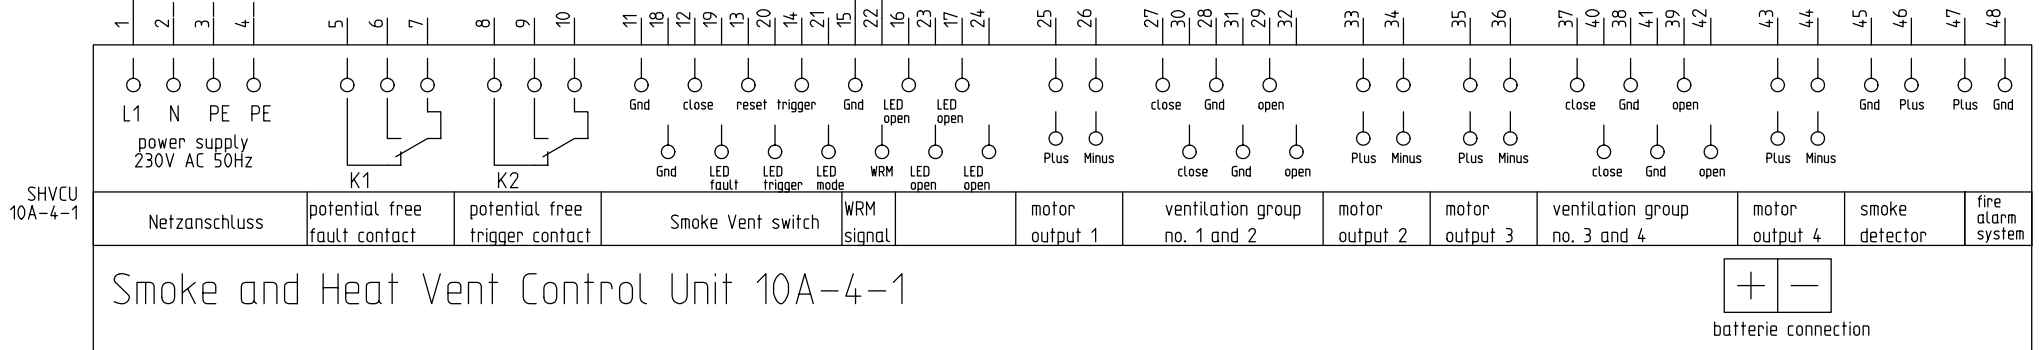

Smoke and Heat Vent Control Unit 10A-4-1

--24_0102--0100_E048_--

vorherige Seite: 6							Kunde		Projektbeschreibung			Blattbeschreibung		nächste Seite: 8		
Zustand	Anderung	Datum	Name	Projekt	Datum	Name	RWA-Zentrale 10A-4-1			power supply		Kommission:		Anlage: =		
		18.10.2007		Bearb.	16.03.2005	Krause	documentation			Wind/rain detector		Smoke Vent control unit 10A-4-1		Ort: +		
				Gepr.								Standort		Auftragsnr.:		
				Norm			Urspr.			Ers.f		Ers.d		Blatt: 7		
														von 9		

Trigger and Fault retransmission

Central Fire Alarm System

1 x potential free alternating contact


1 x potential free alternating contact

Fault retransmission

pass clamp 6 --> 7: o. K.
pass clamp 5 --> 7: Fault


Trigger retransmission

pass clamp 10 --> 9: Trigger
pass clamp 10 --> 8: no Trigger

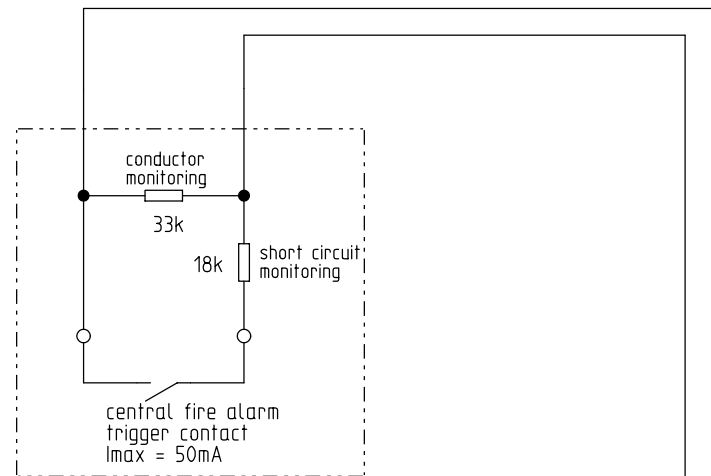

At the state at time of delivery you will find the 33k resistor between clamp 15 and 16. The 18k resistor is packed in a bag by the battery bridge.

Schutzvermerk nach DIN 34 beachten!

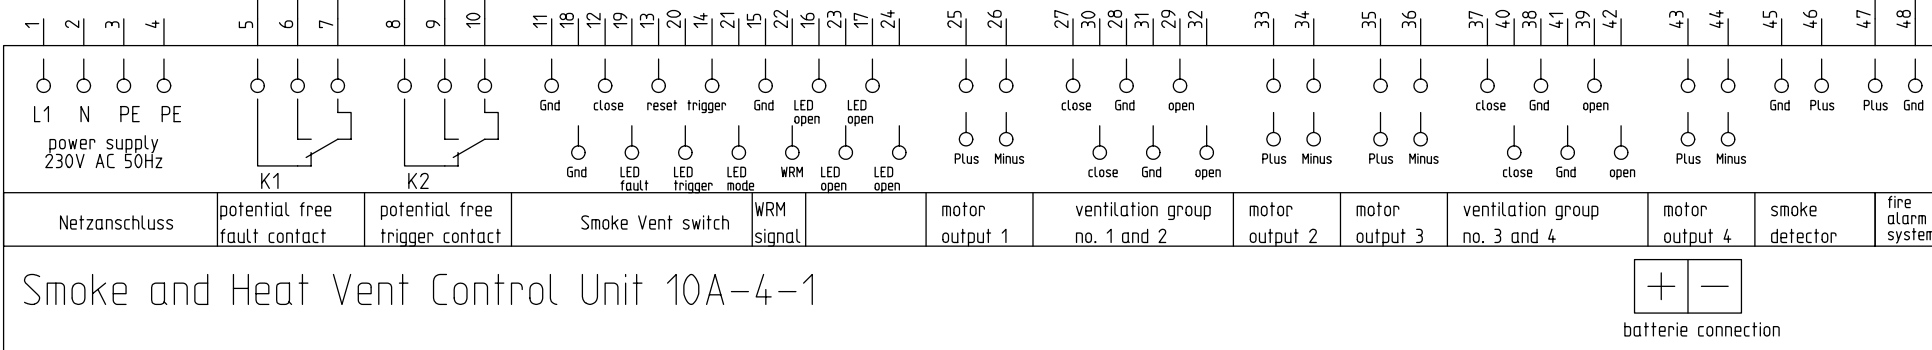

Smoke and Heat Vent Control Unit 10A-4-1

--24_0102--0100_E048_--

vorherige Seite: 7							Kunde		Projektbeschreibung			Blattbeschreibung			nächste Seite: 9		
Zustand	Anderung	Datum	Name	Projekt	Datum	Name	RWA-Zentrale 10A-4-1			central fire alarm system			Kommission:		Anlage: =		
		20.01.2010		Bearb.	16.03.2005	Krause	documentation			relay trigger			Smoke Vent control unit 10A-4-1		Ort: +		
				Gepr.			Urspr.			Ers.f			Standort		Auftragsnr.:		
				Norm			Ers.f			Ers.d					Blatt: 8		
							Ers.f			Ers.d					von 9		


The lines terminated with resistors are monitored by line breaks.

The lines for the Smoke Vent switch, the fire alarm system and the smoke detectors are also monitored by short circuits.

fire alarm system input

smoke detectors

Smoke Vent switch motorline 1 motorline 2 and 3 motorline 4

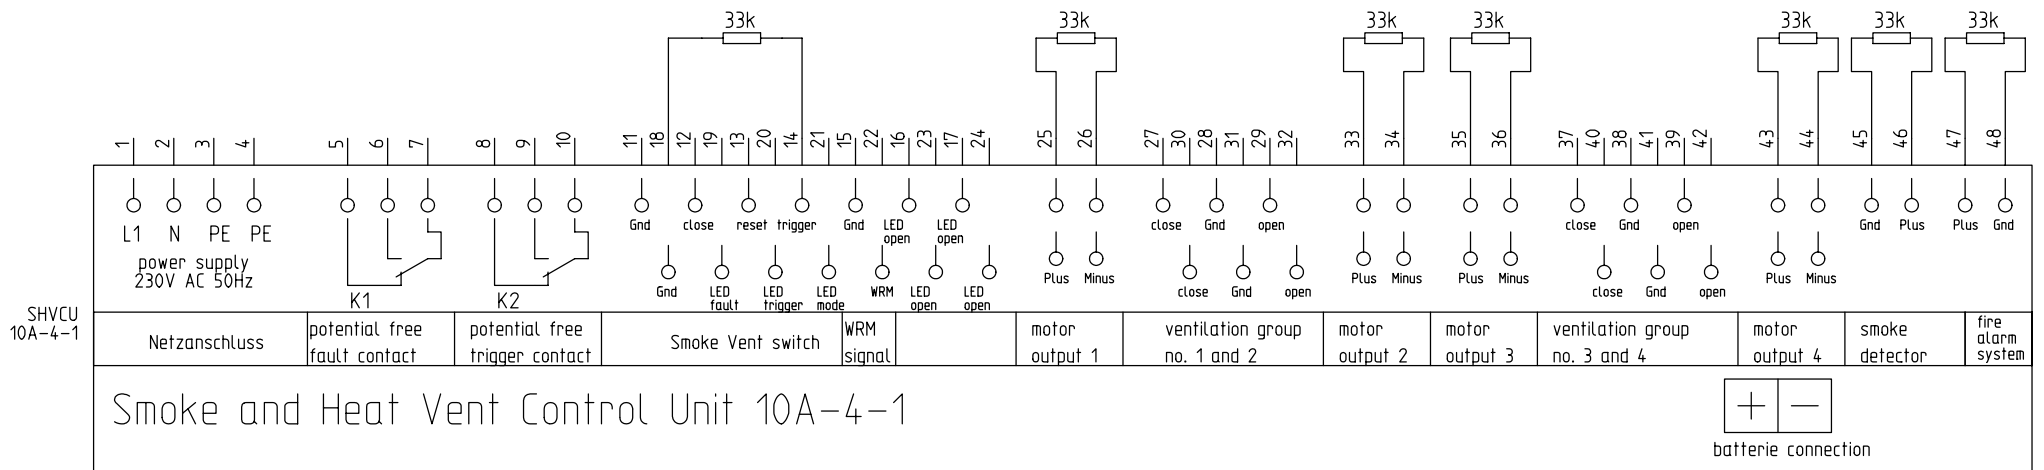

--24_0102--0100_E048_--

vorherige Seite: 8							Kunde	Projektbeschreibung	Blattbeschreibung	nächste Seite:		
Zustand	Aenderung	Datum	Name	Projekt	Datum	Name	RWA-Zentrale 10A-4-1 documentation	state at time of delivery resistors	Kommission:		Anlage: =	
		20.01.2010		Bearb.	16.06.2005	Krause			Smoke Vent control unit 10A-4-1		Ort: +	
				Gepr.					Standort	Auftragsnr.:		Blatt: 9
				Norm			Urspr.	Ers.f	Ers.d		von 9	