

INSTALLATION AND COMMISSIONING INSTRUCTION

REL1 Relay for status forwarding

REL1 - Relay for status forwarding



Part.-No.: 659950

Application: For the transmission of various functions or status of a SHEV or natural ventilation control unit to external devices.

Operating voltage: 24V DC

Contact type: 3x Change-over switch

Switching capacity: 230 V / 10 A

Connections: Screw terminal 1,5 mm² (rigid wire)

OPTIONS

500113

Cabinet mounting
(a larger housing may be required)

Equipment:

- With base for installation at 35-mm mounting rail and suppressor diode





Connection only executed by specialist personnel in accordance with the national guidelines.



Only connect when disconnected from the mains power supply!
Switch off power supply and secure against re-connection!



Warranty claims require proper and professional assembly, installation and maintenance in accordance with national regulations and manufacturer's instructions as to SHEV Control Unit. Always disconnect the system from power supply and back-up battery voltage prior to any installation or modification work on the control unit.

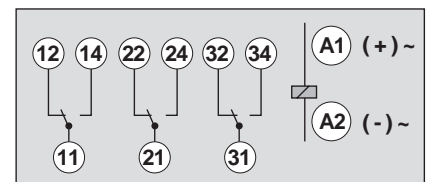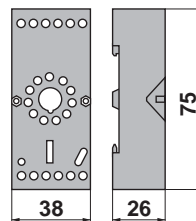

Strictly observe the information given in this and in the instructions for installation of the SHEV control unit, when mounting the **REL1 (Relay for status forwarding)**.

Details can be found on our website

www.aumueller-gmbh.de

Keep this instruction over the lifetime of the product.

www.aumueller-gmbh.de

AUMÜLLER AUMATIC GMBH

Gemeindewald 11

86672 Thierhaupten

Tel. +49 8271 8185-0

Fax +49 8271 8185-250

info@aumuelle-gmbh.de

9000026201_V0.1_KW36/17