

Installation Instruction

In the election of the supply line a sufficient wire-cross section must be taken into account.

When these instructions are not complied with the internal electronics of the drive can no longer be switched off. There is the risk of a faulty drive or window function.



During the mounting of the drive it should be ensured that its end switch can be reached.

If upon closure the end switch is not reached, it will move with a force of up to 9 000 N into the “Close” end position. The frame or windows can be damaged.


(The technical characteristics of the motor opener must be observed → see data sheet)

The manufacturer does not assume any liability for an unprofessional installation.

The motor opener or exchange of the connection line may only be performed by a repair workplace authorized by the manufacturer. The directives ASRA 1.7 & ASRA 1.6 for power-controlled windows, doors and gates must be complied with (supplier: Federation of institutions for statutory accident insurance and prevention [Hauptverband der gewerblichen Berufsgenossenschaften, HVBG]).

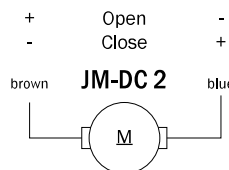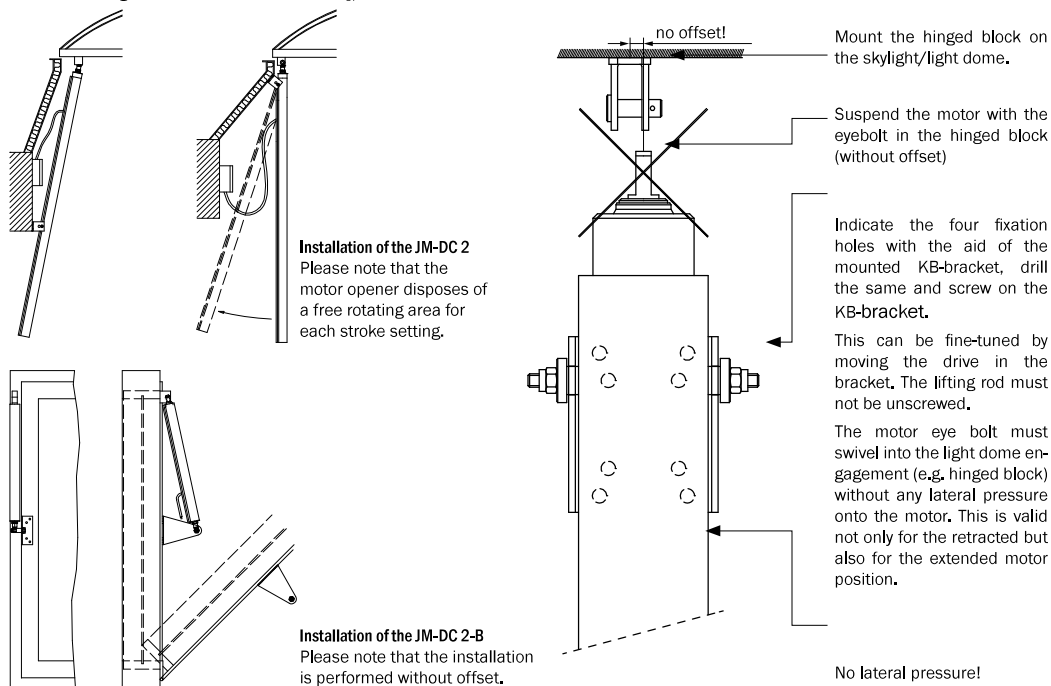

JM - DC 2 (- B) - XXX - XXX

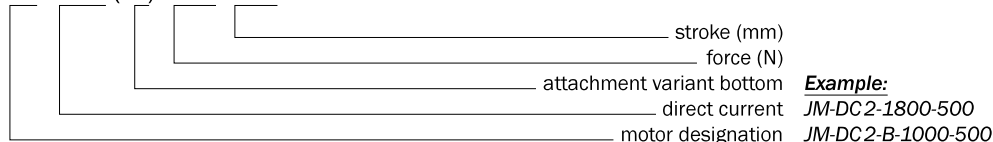

Control

Safety instructions

Circuit diagram

Type codes

The motor opener JM-DC 2(-B) is maintenance-free.

